Marine Weight Schedule - User Manual

Introduction

Marine Weight Schedule is a plugin for Rhino 3D designed to generate - from a vessel's 3D model - a bill of masses/inertias, as well as a Bill Of Materials. It take in account points, curves, surfaces, solids and blocks, and use the parameters from the layers names to apply the unitary/lineic/surfacic/volumic masses, with a margin percentage applied.

A command is also provided to generate an hydrostatic report at a given height interval (based on Rhino hydrostatics features)

Both reports will be generated as excel files (.xlsx) based on a customizable template, but microsoft excel doesn't need to be installed on the computer.

Plugin installation

Overview

The plugin installer can be downloaded at: https://www.tomkod.com/product/marine-weight-schedule/ A free trial is included, and yearly licenses can be purchased on the aforementioned page. *Marine Weight Schedule* works for Rhino 6¹⁾ and Rhino7²⁾.

Yak

Our plugins are also compatible with <u>Yak</u>, Rhino's new package manager³⁾, which is basically an application store for Rhino. You just need to call Rhino's command **PackageManager**:

Last

update: 2021/01/07 start:plugins:marineweightschedule:mws-usermanual https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1610024244 13:57

| ne Insta | lled | | | |
|-------------------------|---|---|---|---|
| tomkod | | | | 0 |
| | AttributeAnalysis AttributeAnalysis is a tool designed to give you a fast Analysis of your rh DrawUserTexts This plugin for Rhino6 brings several life changing tools for your 2D drawi LightweightSurvey This plugin for Rhino allows your technicians to conduct a vessel s full su | Url: Description: AttributeAnalys fast Analysis of an attribute: all automatically a | AttributeAnalysis 3 Matthieu Arnold (2.0.4-beta lundi 14 décembre https://www.tom/ product/attribute: is is a tool designed your objects will be nd a color key table vill also be able to s | 2020 tod.com/ analysis/ to give you a ttributes. Select colorized will be |
| • | MarineWeightSchedule The Marine Weight Schedule plugin for Rhino6 can generate a bill of masses RhinoBeamTools Rhino Beam Tools is a rhino plugin built as a bridge between Rhino and spec | ~ | | Instell |
| Include | e pre-releases | | Cheve | Help |
| - includ | | | Liose | |
| | an also install from the repository with th | ne following co | Close | |
| íou ca | an also install from the repository with th Program Files\Rhino 6\System\Y | | mmand line | : |
| You ca "D:∖ f you | | ak.exe" ins | mmand line | : ginName |

C:\>"C:\Program Files\Rhino 6\System\Yak.exe" install PluginName Downloading PluginName(X.X.X)... Downloaded PluginName(X.X.X) Installing PluginName(X.X.X)... Successfully installed PluginName(X.X.X) C:\>

License activation

Prerequisites

The free evaluation can be used once per computer, and requires network access to www.license.tomkod.com The license activation requires network access to www.tomkod.com

Please check your firewall in case of failure.

Activation form

The activation window automatically shows up when the plugin is loading and a valid license or trial is not registered. If you want to see, change or remove your license while the plugin is already loaded, you can use the Rhino commands **PluginName_License**.

Activation status is always visible on the upper right corner of the form, if the icon is green your plugin will be enabled:

| Plugin Status | |
|----------------------------|--------|
| Enabled - license is valid | \sim |

Trial Tab

This first tab is dedicated to the trial requests. Your trial status is displayed, and the button is disabled if a trial is not available for your computer (Your trial has already been activated, or the server is unreachable)

| TomKod license activation - Tal | ole 3.x | ? | × |
|------------------------------------|---|---|---|
| Tom Kod > | Plugin Status Enabled - license is valid | 0 |) |
| Free Tital License Commercial Lice | nse Details | | |
| Computer ID: | 12-19 | | |
| | | | |
| 1.00 | | | |
| Requ | ist Free evaluation (*) | | |
| Regut Status: Accepted (End dat | | | |

Commercial Tab

This tab's two main buttons let you Check-out (Activate) or Check-in (Desactivate) your license from

our license server.

| TomKod license | e activation - Table | e 3.x | | ? × |
|------------------------------|--|--------------------------------|----------------|----------|
| FomKod Softwares for user | | Plugin Status Enabled - lic | ense is valid | |
| Free Trial License | Commercial Licens | e Details | | |
| Email | 1 | e.com | | |
| Product key | | | | |
| Activ | ate (Check-Out) | | Desactivate (C | heck-in) |
| Status: Dis | abled | | | |
| Enable floa | ating licenses (Affe | cts every Tor | nKod plugins) | |
| Use a license ce | etificate | | | |
| | native method for o void network activa | | | |
| | | | | |

When the checkbox "Enable floating licenses" is checked, every TomKod's plugin will try to deactivate the license automatically when closing (Making it available for another of your computers)

Finally, a license certificate (*.TkLic) can be selected at the bottom of this tab. It allows to activate a license offline, but the license won't be floating anymore. If you need one, contact us at https://www.tomkod.com/contact/

Toolbar

The toolbars for Rhino are always included in your plugins installation directory, or can be downloaded here.

You just have to drag/drop the file "Tomkod.rui" to a rhino window to install them.



Features and commands

MWS_About

This command can be used only from the command line prompt. It displays the plugin's current revision and license status.

5/15

| About 1 | 2 |
|--|-------------------------------------|
| MarineWeightSchedule - v1.1.0.0 | |
| Commercial Name: Marine Weigth Schedule 1.x Update Status: Marine Weigth Schedule 1.x: Your current version (1.1.0.0) is an early release candi Editor: TomKod Copyright: Copyright ©Ship-ST 2020 | idate. Latest stable version: 1.0.9 |
| License status Commercial license: Enabled - Successfully activated: 0 out of 1 activations remaining Trial status: Ended Computer ID: TomKodDevComputerUniqueID | |
| CHANGELOG: y | |
| 9 available commands | |
| HydrostaticReport MWS_License MWS_About ProjectWeightReport GBlock_Select GBlock_Select GBlock_SelectWeitMissingData GBlock_ReadData GBlock_ReadData | |
| Сору Дії | Save As Close |

MWS_License

This command can be used only from the command line prompt. It displays the plugin's activation form.

See license_activation.


ProjectWeightReport

Computes the whole model masses, <u>as well as a Bill Of Materials</u>⁴⁾ and generates an excel report.

Walkthrough

For each layer⁵, the command will retrieve the *Mass*, *Margin* and *Vertical offset* values from the layer name⁶, then:

- For each rhino object, the actual mass and gravity center will be computed, using the layer values. The layer's *Mass* will be used differently, depending on the object's type: ponctual mass for Points, lineic mass for curves, surfacic mass for surfaces⁷⁾, and volumic mass for closed polysurfaces.
- 2. At the same time, the Bill-of-Materials will be created internally.
- 3. An excel report will be created.

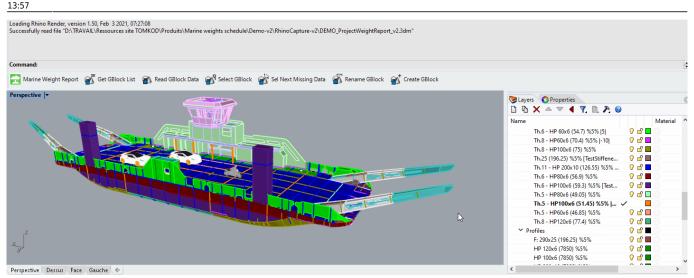

Model preparation

The fondamental idea of this plugin is to match data from the model's objects and their layer. For this reason, each layer should contain only one specific material. *For example:*

- The layer **Deck1:SectionB:Nuts** could contain only points, and the layer's (mass) information would be used as a ponctual mass for each nut.
- The layer **Deck1:SectionB:plates** could contain only surfaces, and the layer's (mass) information would be used as a surfacic mass for each plate.

Layers naming convention

The document's layers should follow the following naming convention:

LayerName (Mass) %Margin% |VerticalOffset|

where:

- Mass will be the ponctual/lineic/surfacic/volumic mass
- Margin (optional) will be the percentage to add to the object's mass.
- VerticalOffset (optional) will be the the vertical offset to apply to the layer's masses

| 💙 Layers | | |
|---|---|-------|
| Name | | 11 |
| ✓ Float | ~ | |
| ✓ Plates | 0 | 6 |
| Th.8 - HP60x6 (70.4) %5% -10 | S |) 🗗 🗖 |
| Th.8 - HP100x6 (75) %5% | S |) 🗗 🗖 |
| Th.25 (196.25) %5% [TestStiffenerRef1 s=14] | V |) 🗗 🔳 |
| Th.5 - HP100x6 (51.45) %5% [20] | S |) 🗗 🗖 |
| ✓ Profiles | 0 |) 🗗 🗖 |
| HP 100x6 (7850) %5% | 0 |) 🗗 🔳 |
| F: 150x11 (86.35) %5% | 0 |) 🗗 🗖 |
| F: 180x11 (86.35) %5% | S |) 🗗 🗖 |
| ✓ Equipments | S |) 🗗 🔳 |
| Rescue Boats (180) 500 | S |) 🗗 🗖 |

Particular case for Stiffeners

A specific naming convention has been added to properly count the stiffeners in the Bill-of-Materials, to consider the scenarii explained below.

Those particular cases only impact how materials will be counted in the Bill-of-Material tab. <u>The weight report results</u> won't be impacted.

• Implicit stiffeners

There are some cases where you don't want/need to create an actual geometry for your structure stiffeners, for example when you are at the early stage of your project. *Implicit stiffeners* let you count the required stiffener lengths relative to the layer's metal sheet's areas.

LAYERNAME: MyLayerName (Mass) %Margin% |VerticalOffset| [StiffenerName s=value]

In the Bill-of-Material, this would create two outputs: an area for the surfaces in "*MyLayerName*", and a length for their stiffeners.



For example:

Th.6 (56.9) %5% [HP80x6 s=49.05] 🛛 🖓 🖆 🔳

• Stiffeners defined as curves in the model

Last update: 2021/01/07 start:plugins:marineweightschedule:mws-usermanual https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1610024244 13:57

Two kind of curves-defined stiffeners can be used:

• Folded plates

LAYERNAME: W:120x6 BF60

This will be counted as one surface, Thickness 6, width=120+60. Thus the result in the Bill-ofmaterials will be:

| | i | 'Th.6 plate Area' = length x (120+60) |
|--|---|---------------------------------------|
|--|---|---------------------------------------|

• Profile with flat plate

```
W:120x6 F:80x8
```

This will count as one surface, Thickness 6, width=120, plus one profile 80×8

In this case, the command will output an area for the plate, and a length for the profile:

'Th.6 plate Area' = length x 120

'80×8 profile length ' =length

• Stiffeners defined as surfaces in the model

In some cases, you might want to represent your stiffeners as a 3D surface in the model, but count them as lineic outputs in the Bill-of-Materials because they are technically profiles.

LAYERNAME: F:80x8

This would output:



As for the weight estimate, the layer's optional %Tolerance% will be considered:

LAYERNAME: F:80x8 |34.1| (87.2) %3.4%

This would output:



'80×8 profile Length' = (area / 80) + (area / 80) * 3.4/100

Particular case for Blocks

By default, rhino[®] blocks⁸⁾ are ignored by the command. However we provide several commands to transform blocks into GBlocks, which are considered in the reports as ponctual masses.

See gblock_setdata

When the command will process GBlocks, their layer properties will be ignored, and the Gblock's internal definition will be used instead (Name, gravity center, mass).

Output

When the whole model has been processed, an excel⁹⁾ report is generated, and the user is invited to pick a name and location for the resulting file. Bill of masses main sheet:

| | В | C | D | E | F | G | Н | 1 | J | к | | b | м | N | 0 | n. | Ρ |
|---------------------------------|---|--------------|------------------|---------------|-----------------|-----------------|-----------------|-----|---|---------|--------|--------|----|---|--|-------|---|
| TomKe | | [| | | ECT : XXX | | | | | | | | | | | | |
| Softwares | for users, by users | | | | MMARY-re0 |) | | | | | | | | | | | |
| Last update: 05/01/20 Refere | 1 <mark>21 (15:13)</mark> nce; DEMO_Projec | tWeightRepor | t.3dm | | | | | | | | | | | | | | |
| | | | | | м | asses Inerti | as | | | | | | | | | | |
| ltem | Mass (kg) | Xg (mm) | Yg (mm) | Zg (mm) | lzz (kg.mm²) | lyy (kg.mm²) | lzz (kg.mm²) | | | | | 110. | | L | | 1111 | |
| Volumic Masses | 256 | -62 | -821 | 1739 | 4756536917 | 60400264,6 | 7,878E+10 | | | a Maria | THE | | | | | - | |
| Surfacic Masses | 69623 | -19 | 150 | 2211 | 2322883807 | 3,0123E+13 | 2,5896E+10 | | | | | | | | | | |
| ineic Masses Ponctual Masses | 0 2611 | 0 2125 | -93 | 0 3408 | 0 18519817,8 | 0 | 0 2,1869E+11 | | | | | | | | | | |
| Oliciual Masses | 2011 | 2123 | -33 | 3400 | 10513017,0 | 1366336633 | 2,1003E+11 | | | | | | | | | | |
| Total | 72489 | 58 | 138 | 2252 | 1,116E+10 | 3,014E+13 | 3,3532E+11 | | | | | | | | | | |
| | | 88 8.0% | 968 (Styles) - 4 | | | | | _ | | | | | | | | | _ |
| | | Hunge | ens Theorer | n | | | | | | | | | | | | | |
| New point's co | ordinates : |] | | | New Inertia | | | | | | | | | | | | |
| | X= 0 | | lx= | 380 262 010 7 | | | | _ | | | | | | | | | |
| | Y= 0 | | ly= | 30 508 174 81 | | | | | | | | | | | | | |
| | Z= 0 | | lz= | 336 945 050 | 974 | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | 15 | 12-01 | | | | And Persons in the local division of the loc | - 7h- | |
| | | | | | | | | | | ah- | | - | | The second se | att and | 10 | |
| | | | | | | | | | | 1000 | | 11 1 - | - | | | - | |
| | | - | | | | | | | | 100 | 100.1 | 1 | 4 | (313) | 1 | - | |
| | | | | | | | | | | Sel. | IL OF | | | 100 | 0 | 212 | _ |
| | | | | | - | | i | | | W.Fr | 11-11- | 111- | TT | | | C-IV | |
| | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | |
| | | | | | | | | (+) | | | | | | | | | |

Bill of masses detailed sheets for Volumes, surfaces, curves and points:

| | A | В | C | D | E | F | G | н | 18 | J | К | L | M | N | 0 | |
|-----|---|---|---|---|-----------------------------|---------------------------|------------------------------------|--------------------------------------|---|--|---|---|--|---|---|--|
| - | TomKod > | 1 | | BOJECT : ssa | | | | | | | | | | | | |
| | | | | | | | ę. | | | | | | | | | |
| | Softwares for users, by users | | | SUMMARY | r-reu | | | | | | | | | | | |
| | | <u></u> | 1 | Customer : | 1 | | | | | | | | | | | |
| Las | st update: 18/02/2021 (13:49) | | | | | | | | | | | | | | | |
| | Reference | ; DEMO_Projec | tWeightReport | t_v2.3dm | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | |
| | | BILL C | F YOLUMIC | MASSES | | | | | | | | | | | | |
| | | BILL C | if Yolumic | MASSES | | | | | Ve | olumes iner | tia | M | lasses inert | tia | | |
| | Item | BILL C Volume (mm²) | Yolumic mass | | Mass (kg) | Xg (mm) | Yg (mm) | Zg (mm) | | olumes iner Iyy (mm*) | tia Izz (mm') | izz | lyy | iia Izz (kg.mm³) | | |
| | Item Bi-Metal | Volume | Volumic | | Mass (kg) 2 | Xg (mm) -214 | Yg (mm) -5261 | Zg (mm) 2958 | | | | izz | lyy | Izz | | |
| | | Yolume (mm²) | Yolumic mass (kg/m²) | Margins | 002000050075 | 0.707/00/00 | 10,50,000,000 | A service and a | lzz (mm*) | lyy (mm*) | lzz (mm*) | l zz (kg.mm²) | lyy (kg.mm²) | lzz (kg.mm²) | | |
| | Bi-Metal | Volume (mm³) 4.13E+07 | Volumic mass (kg/m²) 53 | Margins | 2 | -214 | -5261 | 2958 | Izz (mm*) 8.23E+12 | Igy (mm*) 1.96E+15 | lzz (mm*) 1.97E+15 | Izz (kg.mm*) 4.36E+05 | lyy (kg.mm*) 1.04E+08 | lzz (kg.mm*) 1.04E+08 | | |
| | Bi-Metal Steel:Profiles::Round Ø20 Float::Profiles::HP 120x6 Float::Profiles::HP 100x6 | Yolume (mm*) 4.13E+07 2636208 1.45E+07 1.15E+07 | Volumic mass (kg/m ³) 53 7850 7850 7850 | Margins 0.0% 5.0% 5.0% 5.0% | 2 22 120 95 | -214 -165 | -5261 4874 0 -469 | 2958 4150 1691 1758 | 8.23E+12 1.25E+12 1.81E+14 6.96E+13 | Igg (mm*) 1.96E+15 1.93E+12 2.65E+15 8.70E+14 | Izz (mm*) 1.97E+15 1.75E+12 2.83E+15 9.34E+14 | Izz (kg.mm*) 4.36E+05 1.03E+07 1.49E+09 5.74E+08 | igg (kg.mm ²) 1.04E+08 1.59E+07 2.19E+10 7.17E+09 | Izz (kg.mm*) 1.04E+08 1.44E+07 2.33E+10 7.70E+09 | | |
| | Bi-Metal Steel:Profiles::Fround Ø20 Float:Profiles::HP 120x8 Float:Profiles::HP 100x8 Float:Profiles::HP 200x10 | Yolume (mm ²) 4.13E+07 2636208 1.45E+07 1.15E+07 2.51E+07 | Volumic mass (kg/m ³) 53 7850 7850 7850 7850 7850 | Margins 0.0% 5.0% | 2 22 120 95 207 | -214 -165 0 | -5261 4874 0 -469 -807 | 2958 4150 1691 1758 1407 | Izz (mm*) 8.23E+12 1.25E+12 1.81E+14 6.96E+13 7.60E+13 | Igg (mm*) 1.96E+15 1.93E+12 2.65E+15 8.70E+14 3.00E+15 | Izz (mm*) 1.97E+15 1.75E+12 2.83E+15 9.34E+14 3.06E+15 | Izz (kg.mm*) 4.36E+05 1.03E+07 1.49E+03 5.74E+08 6.27E+08 | lyy (kg.mm ³) 1.04E+08 1.59E+07 2.19E+10 7.17E+09 2.48E+10 | Izz (kg.mm*) 1.04E+08 1.44E+07 2.33E+10 7.70E+09 2.52E+10 | | |
| | Bi-Metal Steel:Profiles::Round Ø20 Float::Profiles::HP 120x6 Float::Profiles::HP 100x6 | Yolume (mm*) 4.13E+07 2636208 1.45E+07 1.15E+07 | Volumic mass (kg/m ³) 53 7850 7850 7850 | Margins 0.0% 5.0% 5.0% 5.0% | 2 22 120 95 | -214 -165 0 -296 | -5261 4874 0 -469 | 2958 4150 1691 1758 | 8.23E+12 1.25E+12 1.81E+14 6.96E+13 | Igg (mm*) 1.96E+15 1.93E+12 2.65E+15 8.70E+14 | Izz (mm*) 1.97E+15 1.75E+12 2.83E+15 9.34E+14 | Izz (kg.mm*) 4.36E+05 1.03E+07 1.49E+09 5.74E+08 | igg (kg.mm ²) 1.04E+08 1.59E+07 2.19E+10 7.17E+09 | Izz (kg.mm*) 1.04E+08 1.44E+07 2.33E+10 7.70E+09 | | |


| - | A | в | С | D | E | F | G | н | 1 | J | К | L | M | Ň |
|---|--|--------------------|---|-------------------|-----------|----------|-----------|----------|-----------|--------------|-----------|-----------------|-----------------|--------------|
| | TomKod > | | P | ROJECT : XX | 8 | | 1 | | | | | | | |
| ١ | Softwares for users, by users | | MASS | SUMMAR | Y-re0 | | 1 | | | | | | | |
| 1 | | | | Customer : | 8 | | 1 | | | | | | | |
| 1 | Last update: 05/01/2021 (15:13) | | | | | | 7.X | | | | | | | |
| | Beference : | DEMO_Projec | ctWeightReport | t.3dm | | | | | | | | | | |
| | | | | | | | | | | | | | | |
| | | BILL | OF PONCTU | JAL MASSI | ES | | | | | | | | | |
| | | | he . | 220 | | 39 | 92 | | F | oints inerti | ia | 1 | Masses ine | rtia |
| | ltem | Points quantity | Ponctual mass (kg) | Margins | Mass (kg) | Xg (mm) | Yg (mm) | Zg (mm) | lzz (mm²) | lyy (mm²) | lzz (mm³) | lzz (kg.mm²) | lyy (kg.mm²) | lzz (kg.mm²) |
| Ē | Equipments # Tesla model R | 2 | 2300 | 0,0% | 4600 | 2291 | 294 | 3416 | 5810375 | 63113833 | 68924208 | 13363861587 | 145161816500 | 158525678088 |
| Г | Equipments # MissingData - Bike Harley | 1 | 0 | 0,0% | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Г | Equipments::Rescue Boats | 2 | 180 | 0,0% | 360 | 0 | -5041 | 3308 | 0 | 2,72E+08 | 2,72E+08 | 0,00E+00 | 4,89E+10 | 4,89E+10 |
| | | | | | 4960 | 2124,514 | -93,28 | 3408,451 | | | | 2,29E+10 | 1,96E+11 | 2,1869E+11 |
| | | | and the second se | All second second | Points | | Materials | 1 | | | 1 | | | |

Bill of materials:

| 4 | | A | | в | С | D | E | F | G | н | 5 |
|----|------------------------------|-------------------------|---|-----------|------------|--------------------|-------------------|-----------------|------------|-----|-----|
| 1 | | | | | | | PROJECT | | | | - |
| 23 | | TomKod >< | | | | | SS SUMMA | A 44 - 107 - 10 | | | |
| _ | | Softwares for users, by | users | | | IMIA | | | | | |
| 4 | | | | | | | Customer | | | | |
| 5 | Last update | : 18/02/2021 (13:49 | | | | | | | | | |
| 6 | | E | Reference : DEM | 40_Proj | ectWeightl | Report_v2.3dm | | | | | |
| 7 | | | | | | | | | | | |
| 8 | | | | BI | LL OF M | ATERIALS | 2111 | 115 | | | |
| 9 | | | | | | | | | | | |
| 10 | LAMINATED | PLATES | | | | | | | | | |
| 11 | | | | | | | | | | | |
| 12 | F: 100x11 | | and the second se | 994979.1 | | | | | | | |
| 13 | F: 100x8 | | | 38524.77 | | | | | | | |
| 14 | F: 120x11 | | | 90566.62 | | | | | | | |
| 15 | F: 150x11 | | | 511497.29 | | | | | | | |
| 38 | Th.6 | | | 3378740 | | | | | | | |
| 40 | Th.8 | | 2 | 55121521 | mm³ | | | | | | |
| 44 | | | | | | | | | | | |
| 45 | EXTRUDED P | ROFILES | | | | | | | | | |
| 46 | | | | | | | | 1 | | | |
| 47 | 100x10 | | | 045.2844 | | | | | | | |
| 48 | 60x6 | | | 00.91597 | | | | 1 | | | |
| 49 | 80x10 | | | 8421.4513 | | | | | | | |
| 50 | 80x6 | | 26 | 671.4546 | mm | | _ | | | | |
| 54 | OTUEDO | | | | | | | | | | |
| 55 | OTHERS | | | | | | - | _ | | | |
| 56 | F | Dilla I I alan | | | | | | | | | |
| 57 | Equipments # | Bike Harley | | 1 | | | | _ | | | |
| | Equipments # Bescue Boats | | | 1 | | | | | - | | - |
| 13 | Bescue Boars | | | 1 | | This second second | The second second | | | - | |
| | 4 F | Results | Volumes | Su | faces | Curves | Points | BillO | fMaterials | (+) | 1.1 |

A custom ViewPort is created with the gravity center displayed:

Rhino Viewport

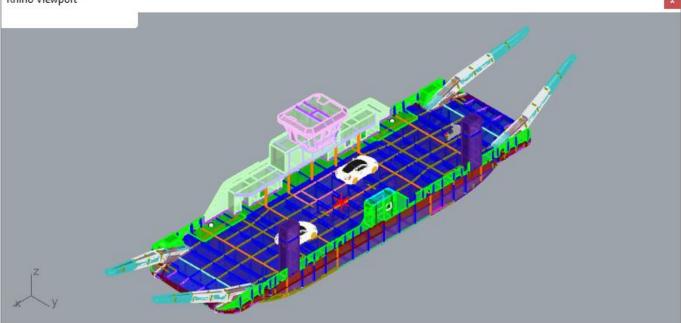

Options

No option available.

Customization

The excel report template "PWE_Model.xlsx" can be modified in the plugin's install directory, usually:

%AppData%\McNeel\Rhinoceros\7.0\Plug-ins\Marine Weight Schedule for RH6-RH7 (dac6da37-23fc-4ad6-9b46-33a2cad9e13b)\VersionNumber (Adapt Rhino's version if needed, as well as the plugin's version)

It is recommended to edit only the texts values and the logos, while keeping the document general layout.

HydrostaticReport

Computes an hydrostatic analysis at different heights and generates an excel report.

Walkthrough

The hull's surface or polysurface is selected as input. Once validated, Rhino's hydrostatic culculation is runned at various heights as defined in options, and an excel report is generated.

Last

update: 2021/01/07 start:plugins:marineweightschedule:mws-usermanual https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1610024244 13:57

| 4 | A | 8 | C | D | E | F | G | Н | 1 | J | К | L |
|---------------------------------|--|---|--|--|---|--|--|---|--------------------------------------|---|--|--|
| 2 | .in | | | | | | | | | CASE : xxx | | |
| 5 | MSW | - | | | | | | | Hyd | rostatique | -rev0 | |
| - | ~~~~ | - | | | | | | 1 | | Customer. | | |
| | Last upd | late: 09/10/20 | 018 (18:40) | | | | | | | | | |
| | | | Reference : | HULL.3dm | | | | | | | | |
| | | | | | | | | | | | | |
| | Density: | 1,025 | | | | | | | | | | |
| | Contraction of the local distance of the loc | Hull | Di di | | | | Wet | | | Floating | | |
| e. | TE (mm) | Volume (m3) | Displaceme nt (Kg) | LCB (m) | TCB (m) | VCB (m) | Surface (m ²) | Lwi (m) | Bwl (m) | Surface (m ²) | LCF (m) | TCF (m) |
| 1 | TE (mm) | Volume (m3) 0 | | LCB (m) | TCB (m) 0 | VCB (m) | Surface (m ²) 0 | Lwl (m) | Bwl (m) | Surface (m²) 0 | LCF (m) 0 | TCF (m) |
| 0 | 90 - 200 A. | (m3) | nt (Kg) | Contraction (Contraction) | an-assaulte | CEREMON! | (m²) | in the second | Constant and a | (m²) | Strength and | 0 |
| 0 | 0 | (m3) 0 | nt (Kg) 0 | 0 | 0 | 0 | <u>(m²)</u> 0 | 0 | 0 | (m²) 0 | 0 | 0 -1,7745E-14 |
| 0 | 0 400 | (m3) 0 104,716 | nt (Kg) 0 107333,9 | 0 6,6647E-09 | 0 4,4018E-15 | 0 0,211786 | (m²) 0 309,518 | 0 28,931 | 0 | (m²) 0 300,97 | 0 2,6666E-09 | 0 -1,7745E-14 2,6562E-09 |
| 0 1 2 3 | 0 400 800 | (m3) 0 104,716 234,389 | nt (Kg) 0 107333,9 240248,725 | 0 6,6647E-09 -4,4117E-08 | 0 4,4018E-15 2,0758E-09 | 0 0,211786 0,42879 | (m ²) 0 309,518 368,815 | 0 28,931 32,3866 | 0 11,0001 11,2 | (m²) 0 300,97 341,889 | 0 2,6666E-09 -1,6783E-08 | 0 -1,7745E-14 2,6562E-09 5,4739E-09 |
| 9 0 1 2 3 4 5 | 0 400 800 1200 | (m3) 0 104,716 234,389 377,207 | nt (Kg) 0 107333,9 240248,725 386637,175 | 0 6,6647E-09 -4,4117E-08 -1,2697E-07 | 0 4,4018E-15 2,0758E-09 3,7393E-09 | 0 0,211786 0,42879 0,646117 | (m ²) 0 309,518 368,815 422,516 | 0 28,931 32,3866 35,3723 | 0 11,0001 11,2 11,2 | (m ³) 0 300,97 341,889 371,786 | 0 2,6666E-09 -1,6783E-08 -4,1417E-08 | 0 -1,7745E-14 2,6562E-09 5,4739E-09 9,1985E-09 |
| 0 1 2 3 4 | 0 400 800 1200 1600 | (m3) 0 104,716 234,389 377,207 531,539 | nt (Kg) 0 107333.9 240248,725 386637,175 544827,475 | 0 6,6647E-09 -4,4117E-08 -1,2697E-07 -1,3983E-07 | 0 4,4018E-15 2,0758E-09 3,7393E-09 6,3871E-09 | 0 0,211786 0,42879 0,646117 0,865704 | (m ²) 0 309,518 368,815 422,516 476,361 | 0 28,931 32,3866 35,3723 38,3579 | 0 11,0001 11,2 11,2 11,2 | (m ²) 0 300,97 341,889 371,786 399,569 | 0 2,6666E-09 -1,6783E-08 -4,1417E-08 -2,5545E-08 | CONTRACTOR OF |

Options

| TEMin | Minimum height (mm) |
|------------|--|
| TEmax | Maximum height (mm) |
| Delta | Distance between two tested height (mm) |
| Density | Water Density |
| AutoMinMax | Detect TEMin and TEmax values from geometry (Only available when a geometry is selected) |

Customization

The excel report template "Hydro_Model.xlsx" can be modified in the plugin's install directory, usually:

%AppData%\McNeel\Rhinoceros\7.0\Plug-ins\Marine Weight Schedule for RH6-RH7 (dac6da37-23fc-4ad6-9b46-33a2cad9e13b)\VersionNumber (Adapt Rhino's version if needed, as well as the plugin's version)

It is recommended to edit only the texts values and the logos, while keeping the document general layout.


GBlock_SetData

Adds gravity center and mass informations to a block. GBlocks are considered by the command *ProjectWeightReport*, which makes them extremely useful for your equipements.

Walkthrough

- 1. Start the command
- 2. Pick a rhino block¹⁰⁾ in the model
- 3. Pick the GBlock's gravity center

- 4. Enter the GBlock's mass
- 5. Enter the GBlock's name (By default, Rhino's block name is used)
- 6. Click OK or press Enter

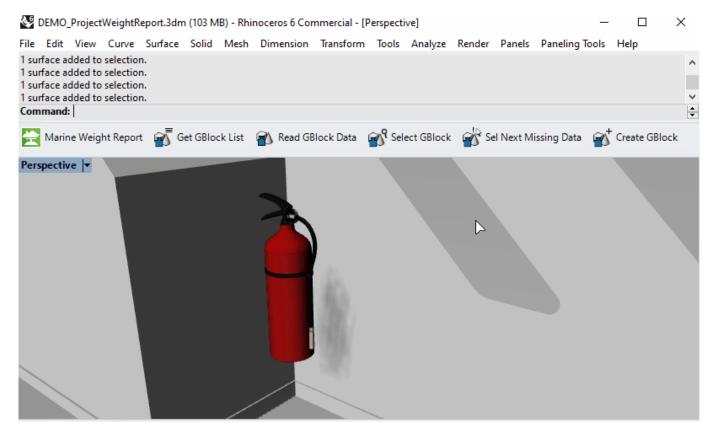


GBlock_GetList

Lists every existing GBlock names and masses to the command line.

Walkthrough

- 1. Start the command
- 2. A windows is shown with details about every blocks instances in the model

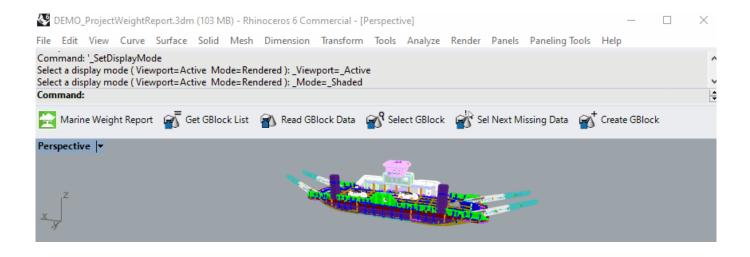

GBlock_ReadData

Reads a GBlock data.

Walkthrough

- 1. Select a GBlock
- 2. The data is shown in the command line:


```
Command: _GBlock_ReadData
Please select a block instance
extinguisher: 3,6 kg (-9960,813,-5131,802,3834,316)
Command:
```

Gblock_Select

Select a block by their GBlock Name. (From a list of available GBlock names)

Walkthrough

- 1. Launch the command
- 2. Pick a GBlock name from the list
- 3. Every instances of this GBlock will be selected in the model

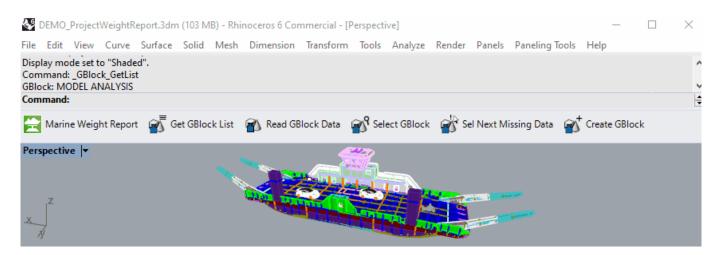


GBlock_SelectNextMissingData

Selects the next block in the document wich is not a GBlock (gravity center and mass are undefined)

Walkthrough

1. Launch the command

2. The commands loops between the non-GBlocks instances in the model. (Press escap to leave)

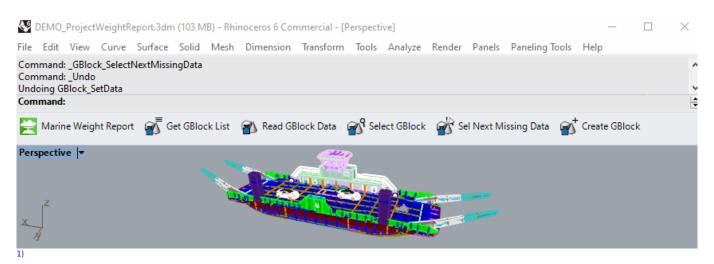

Rhino6.15 or later

Tested up to Rhino 7.1

Rhino 6 or later only, with graphic user interface for Rhino7 only

4)

6)

7)

3)

v1.0.4 and later versions

The whole model or worksession will be used

Read "Model preparation" below

To avoid errors, openened polysurfaces won't be allowed

8)

instances references

.xlsx

10)

Instance reference

From: https://wiki.tomkod.com/ - TomKod knowledge base

Permanent link: https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1610024244



Last update: 2021/01/07 13:57