

Marine Weight Schedule - User Manual

Introduction

Marine Weight Schedule is a plugin for Rhino 3D designed to generate - from a vessel's 3D model - a bill of masses/inertias, as well as a Bill Of Materials. It takes into account points, curves, surfaces, solids and blocks, and uses the parameters from the layers' names to apply the unitary/lineic/surfacic/volumic masses, with a margin percentage applied.

A command is also provided to generate a hydrostatic report at a given height interval (based on Rhino hydrostatics features)

Both reports will be generated as excel files (.xlsx) based on a customizable template, but Microsoft excel doesn't need to be installed on the computer.

Plugin installation

Overview

The plugin installer can be downloaded at: <https://www.tomkod.com/product/marine-weight-schedule/>
A free trial is included, and yearly licenses can be purchased on the aforementioned page.
Marine Weight Schedule works with Rhino 6¹⁾ and Rhino7²⁾.

Yak


Our plugins are also compatible with Yak, Rhino's new package manager ³⁾, which is basically an application store for Rhino. You just need to call Rhino's command **PackageManager**:



You can also install from the repository with the following command line:

```
"D:\Program Files\Rhino 6\System\Yak.exe" install 'PluginName'
```

If you add this in a batch file (*.bat) at windows startup, it is probably the best way to keep all your plugins up-to-date 😊

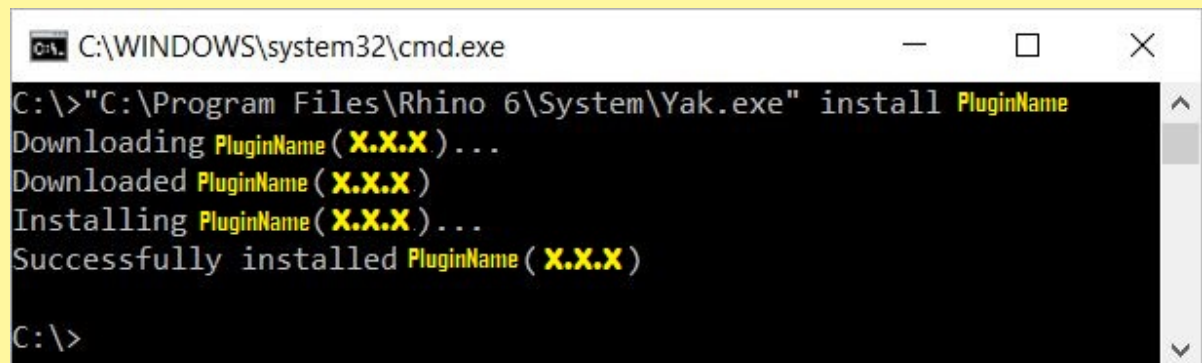

License activation

Prerequisites

The free evaluation can be used once per computer, and requires network access to www.license.tomkod.com

The license activation requires network access to www.tomkod.com

Please check your firewall in case of failure.

Activation form

The activation window automatically shows up when the plugin is loading and a valid license or trial is not registered. If you want to see, change or remove your license while the plugin is already loaded, you can use the Rhino commands **PluginName_License**.

Activation status is always visible on the upper right corner of the form, if the icon is green your plugin will be enabled:



Trial Tab


This first tab is dedicated to the trial requests. Your trial status is displayed, and the button is disabled if a trial is not available for your computer (Your trial has already been activated, or the server is unreachable)



Commercial Tab

This tab's two main buttons let you Check-out (Activate) or Check-in (Desactivate) your license from

our license server.

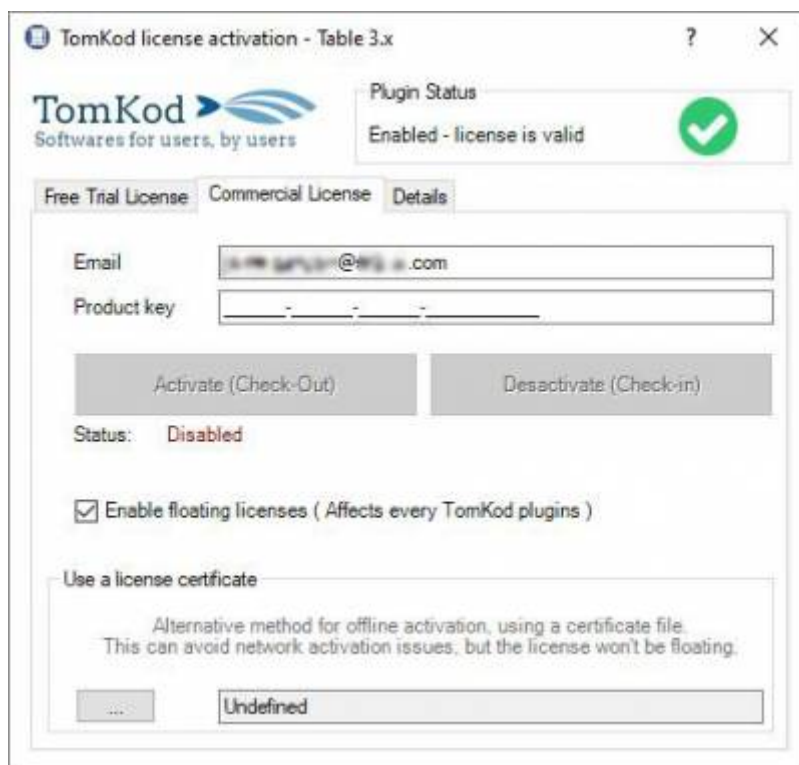


When the checkbox *“Enable floating licenses”* is checked, every TomKod's plugin will try to deactivate the license automatically when closing (Making it available for another of your computers)

Finally, a license certificate (*.TkLic) can be selected at the bottom of this tab. It allows to activate a license offline, but the license won't be floating anymore. If you need one, contact us at <https://www.tomkod.com/contact/>

Toolbar

The toolbars for Rhino are always included in your plugins installation directory, or can be downloaded [here](#).


You just have to drag/drop the file “Tomkod.rui” to a rhino window to install them.

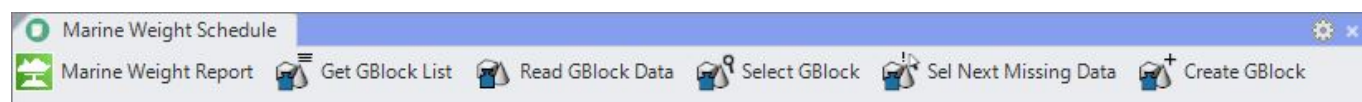

Features and commands

MWS_About

This command can be used only from the command line prompt. It displays the plugin's current revision and license status.

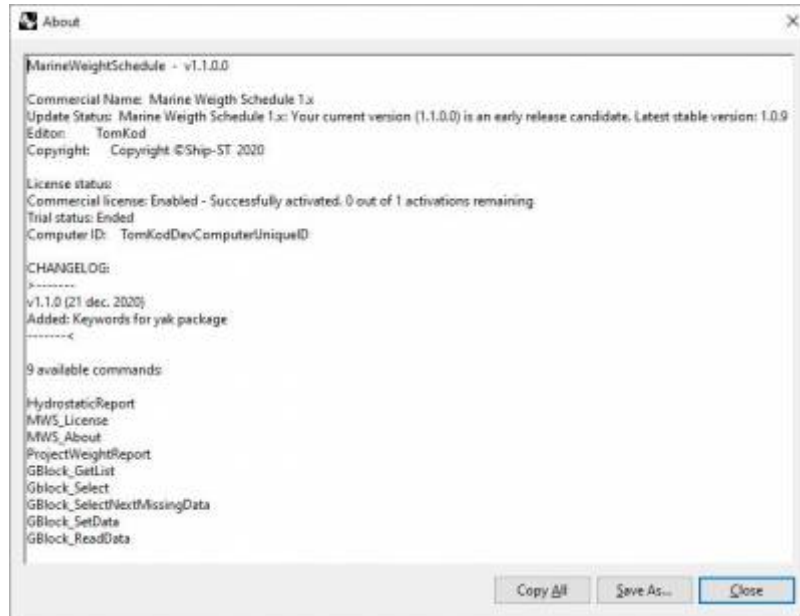

MWS_License

This command can be used only from the command line prompt. It displays the plugin's activation form.

See [license_activation](#).

ProjectWeightReport

Computes the whole model masses, as well as a Bill Of Materials⁴⁾ and generates an excel report.

Walkthrough

For each layer⁵⁾, the command will retrieve the *Mass*, *Margin* and *Vertical offset* values from the layer name⁶⁾, then:

1. For each rhino object, the actual mass and gravity center will be computed, using the layer values. The layer's *Mass* will be used differently, depending on the object's type: punctual mass for Points, lineic mass for curves, surface mass for surfaces⁷⁾, and volumic mass for closed polysurfaces.
2. At the same time, the Bill-of-Materials will be created internally.
3. An excel report will be created.



Model preparation

The fundamental idea of this plugin is to match data from the model's objects and their layer. For this reason, each layer should contain only one specific material. *For example:*

- The layer **Deck1:SectionB:Nuts** could contain only points, and the layer's (*mass*) information would be used as a punctual mass for each nut.
- The layer **Deck1:SectionB:plates** could contain only surfaces, and the layer's (*mass*) information would be used as a surface mass for each plate.

Layers naming convention


The document's layers should follow the following naming convention:

```
LayerName *MaterialName* (Mass) %Margin% |VerticalOffset|
```

where:

- **Mass** will be the ponctual/lineic/surfacic/volumic mass
- **Margin** (optional) will be the percentage to add to the object's mass.
- **VerticalOffset** (optional) will be the the vertical offset to apply to the layer's masses
- **MaterialName**⁸⁾ (optional) will the material's name. In the Bill-of-Material, the materials are displayed in a specific column.

Two layers with the same name but different materials will not be grouped together.

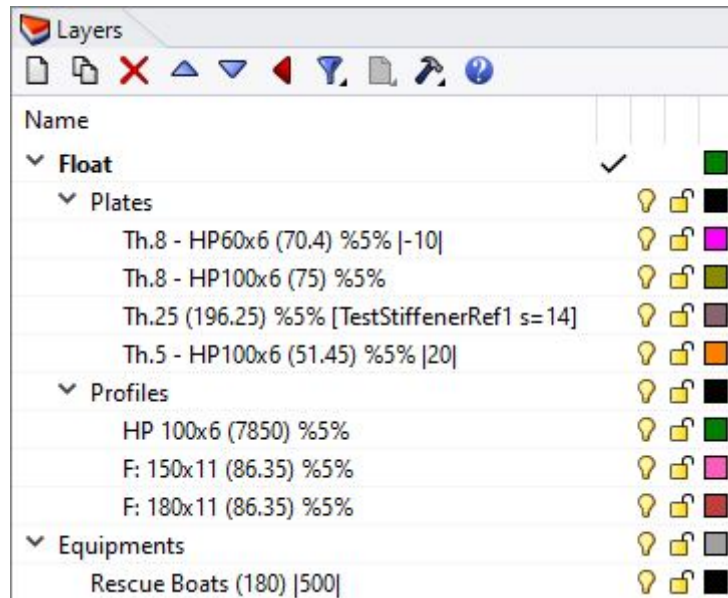

Particular case for Stiffeners

A specific naming convention has been added to properly count the stiffeners in the Bill-of-Materials, to consider the scenarii explained below.



Those particular cases only impact how materials will be counted in the Bill-of-Material tab. The weight report results won't be impacted.

• Implicit stiffeners

There are some cases where you don't want/need to create an actual geometry for your structure stiffeners, for example when you are at the early stage of your project. *Implicit stiffeners* let you count the required stiffener lengths relative to the layer's metal sheet's areas.

```
LAYERNAME: MyLayerName (Mass) %Margin% |VerticalOffset| [StiffenerName s=value]
```

In the Bill-of-Material, this would create two outputs: an area for the surfaces in "MyLayerName", and a length for their stiffeners.



'StiffenerName Length' = 'MyLayerName Area' / s

For example:

```
Th.6 (56.9) %5% [HP80x6 s=49.05]
```



Since v1.1.3, the implicit stiffeners can also have their material names defined with a

specific syntax:



```
LAYERNAME:    MyLayerName *MaterialName* (Mass) %Margin%  
|VerticalOffset| [StiffenerName s=value *MaterialName*]
```

- **Stiffeners defined as curves in the model**

Two kind of curves-defined stiffeners can be used:

- Folded plates

```
LAYERNAME:    W:120x6 BF60
```

This will be counted as one surface, Thickness 6, width=120+60. Thus the result in the Bill-of-materials will be:



'Th.6 plate Area' = length x (120+60)

- Profile with flat plate

```
W:120x6 F:80x8
```

This will count as one surface, Thickness 6, width=120, plus one profile 80x8



In this case, the command will output an area for the plate and a length for the profile:

'Th.6 plate Area' = length x 120

'80x8 profile length ' =length

- **Stiffeners defined as surfaces in the model**

In some cases, you might want to represent your stiffeners as a 3D surface in the model, but count them as lineic outputs in the Bill-of-Materials because they are technically profiles.

```
LAYERNAME:    F:80x8
```

This would output:



'80x8 profile Length' = area / 80

As for the weight estimate, the layer's optional %Tolerance% will be considered:

LAYERNAME: F:80x8 |34.1| (87.2) %3.4%

This would output:



'80x8 profile Length' = (area / 80) + (area / 80) * 3.4/100

Particular case for Blocks

By default, rhino® blocks⁹⁾ are ignored by the command. However, we provide several commands to transform blocks into GBlocks, which are considered in the reports as punctual masses.

See [gblock_setdata](#)



When the command will process GBlocks, their layer properties will be ignored, and their internal definition will be used instead (Name, gravity center, mass).

Output

When the whole model has been processed, an excel¹⁰⁾ report is generated, and the user is invited to pick a name and location for the resulting file. Bill of masses main sheet:

H31									
<div> <div> TomKod Softwares for users, by users </div> </div>									
<div> <div>PROJECT : DEMO</div> <div>MASS SUMMARY-re0</div> <div>Customer :</div> </div>									
Last update: 05/01/2021 (15:13)									
Reference: DEMO_Project\WeightReport.3dm									
	Item	Mass (kg)	Xg (mm)	Yg (mm)	Zg (mm)	Masses Inertias			
						Ixx (kg.mm ²)	Iyy (kg.mm ²)	Izz (kg.mm ²)	
10	Volumic Masses	256	-62	-821	1739	4756536917	60400264,6	7,878E+10	
11	Surface Masses	63623	-19	150	2211	2322883807	3,0123E+13	2,5896E+10	
12	Lineal Masses	0	0	0	0	0	0	0	
13	Punctual Masses	2611	2125	-93	3408	18519817,8	1566596633	2,1869E+11	
14	Total	72489	58	138	2252	1,116E+10	3,014E+13	3,3532E+11	
Huggens Theorem									
New point's coordinates :					New Inertia				
20	X=	0				Ixz=	380 262 010 791		
21	Y=	0				Iyz=	30 508 174 810 857		
22	Z=	0				Izz=	336 945 050 974		
<div> <div>Results</div> <div>Volumes Surfaces Curves Points BillOfMaterials</div> </div>									

Bill of masses detailed sheets for Volumes, surfaces, curves, and points:

A2

TomKod

Softwares for users, by users

PROJECT : XXXX

MASS SUMMARY-re0

Customer :

Last update: 18/02/2021 [13:49]

Reference: DEMO_Project\WeightReport_v2.3dm

BILL OF VOLUMIC MASSES								Volumes inertia			Masses inertia		
Item	Volume (mm³)	Volumic mass (kg/m³)	Margins	Mass (kg)	Xg (mm)	Yg (mm)	Zg (mm)	Ixx (mm⁴)	Iyy (mm⁴)	Izz (mm⁴)	Ixx (kg.mm⁴)	Iyy (kg.mm⁴)	Izz (kg.mm⁴)
Bi-Metal	4.13E+07	53	0.0%	2	-214	-5261	2358	8.23E+12	1.96E+15	1.97E+15	4.36E+05	1.04E+08	1.04E+08
Steel-Profiles-Round Ø20	2696208	7850	5.0%	22	-165	4874	4150	1.25E+12	1.93E+12	1.75E+12	1.03E+07	1.59E+07	1.44E+07
Float-Profiles:HP 120x6	145E+07	7850	5.0%	120	0	0	1691	1.81E+14	2.65E+15	2.83E+15	1.49E+09	2.19E+10	2.33E+10
Float-Profiles:HP 100x6	1.15E+07	7850	5.0%	95	-236	-469	1758	6.96E+13	8.70E+14	9.34E+14	5.74E+08	7.17E+09	7.70E+09
Float-Profiles:HP 200x10	2.51E+07	7850	5.0%	207	2	-807	1407	7.60E+13	3.00E+15	3.06E+15	6.27E+08	2.48E+10	2.52E+10
Float-Profiles-Round Ø30	7526622	7850	5.0%	62	0	-4874	2005	2.54E+12	2.49E+15	2.49E+15	2.09E+07	2.05E+10	2.05E+10
				507.8957	-62.3991	-820.693	1739.091				4.76E+09	7.46E+10	7.89E+10

Results

Volumes

Surfaces

Curves

Points

BillOfMaterials

+

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

TomKod

Softwares for users, by users

PROJECT : xxx

MASS SUMMARY-re0

Customer :

Last update: 05/09/2021 (15:13)

Reference: DEMO_Project\weightReport.3dm

BILL OF PONCTUAL MASSES

Item	Points quantity	Ponctual mass (kg)	Margins	Mass (kg)	Xg (mm)	Yg (mm)	Zg (mm)	Points inertia			Masses inertia		
								lxx (mm²)	lyy (mm²)	lzz (mm²)	lxx (kg.mm²)	lyy (kg.mm²)	lzz (kg.mm²)
Equipments // Tesla model R	2	2300	0.0%	4600	2291	294	3416	5810375	63113833	68924208	13363861587	145161816500	158525678088
Equipments // MissingData - Bike Harley	1	0	0.0%	0	0	0	0	0	0	0	0	0	0
Equipments-Rescue Boats	2	180	0.0%	360	0	-5041	3308	0	2,72E+08	2,72E+08	0,00E+00	4,89E+10	4,89E+10
				4960	2124,514	-93,28	3408,451				2,29E+10	1,96E+11	2,1869E+11

Results

Volumes


Surfaces

Curves

Points

BillOfMaterials

Bill of materials:

	A	B	C	D	E	F	G	H
1	 TomKod Softwares for users, by users	PROJECT : xxx						
2		MASS SUMMARY-re0						
3		Customer :						
4								
5	Last update: 18/02/2021 (13:49)							
6	Reference: DEMO_ProjectWeightReport_v2.3dm							
7								
8	BILL OF MATERIALS							
9								
10	LAMINATED PLATES							
11								
12	F: 100x11	22994979.1	mm²					
13	F: 100x8	3538524.77	mm²					
14	F: 120x11	5090566.62	mm²					
15	F: 150x11	5511497.29	mm²					
38	Th:6	103378740	mm³					
40	Th:8	255121521	mm³					
44								
45	EXTRUDED PROFILES							
46								
47	100x10	16045.2844	mm					
48	60x6	9000.91597	mm					
49	80x10	53421.4513	mm					
50	80x6	26671.4546	mm					
54								
55	OTHERS							
56								
57	Equipments // Bike Harley	1						
58	Equipments // Tesla model R	1						
59	Rescue Boats	2						

Results

Volumes

Surfaces

Curves

Points


BillOfMaterials

...

+

:

A custom ViewPort is created with the gravity center displayed:

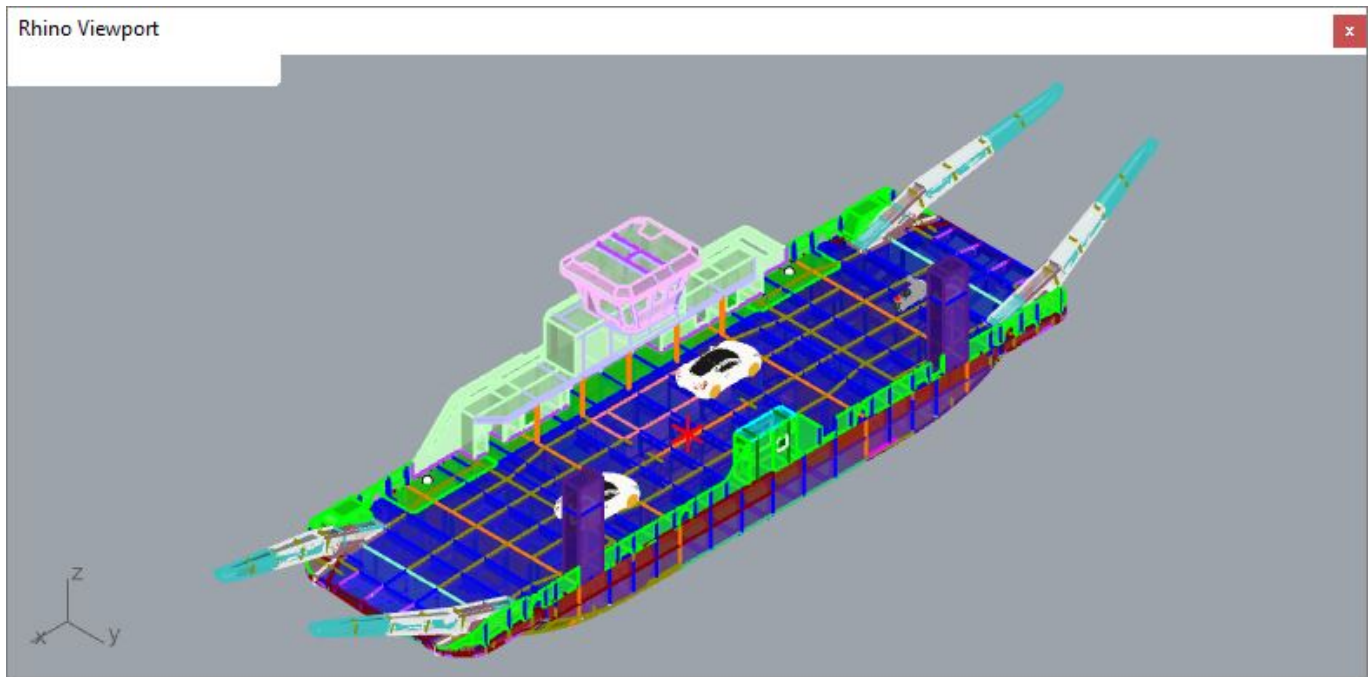

Options

No option available.

Customization

This command behavior can be customized, by editing some files in the install directory¹¹⁾.

Excel templates


The excel report template "PWE_Model.xlsx" can be modified to fit your graphical needs, however, it is recommended to edit only the text values, the column sizes, and the logos while keeping the document's general layout.

Naming conventions for the layers

The naming convention for information specified in the layer's names is based on REGEX (Regular expression), which is the most common way to match a text string to a pattern. The default values can be edited in the file "MWS_CustomRegex.yaml" with any standard text editor.



We recommend using the free text editor NotePad++ will make the YAML format more readable:

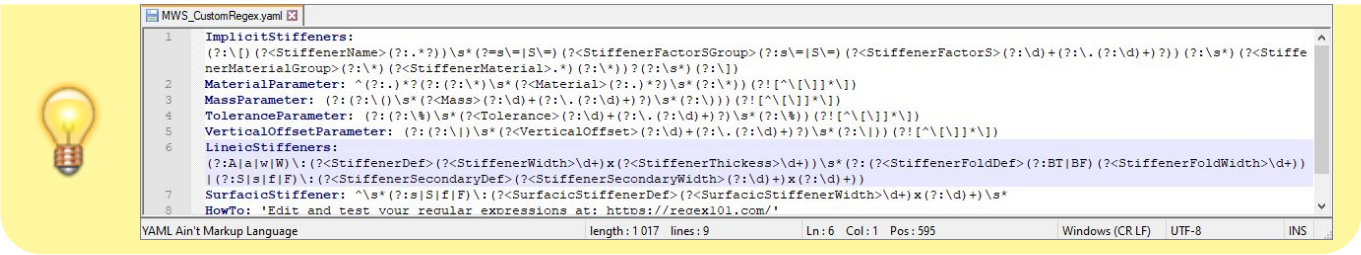


You can test in real-time your customized regular expressions at <https://regex101.com/>, and see if your pattern matches your layer's names.

Example1: The default regular expression to match the implicit stiffeners between square brackets: `[StiffenerName s=value *MaterialName*]`

Example2: The edited regular expression to match the implicit stiffeners between either square brackets or exclamation marks: `[StiffenerName s=value *MaterialName*] or !StiffenerName s=value *MaterialName*!`

ProjectWeightReportByHullSection

 This command¹²⁾ splits the model into sections, then runs *ProjectWeightReport* on each section. The resulting Excel file will contain the usual model-wide report, plus independent reports for every section. (Named from S001 to Sxxx)



Walkthrough

1. Run the command *ProjectWeightReportByHullSection*
2. Pick the x-axis coordinates delimiting the sections¹³⁾.
3. The script will split internally the curves and surfaces, and sort points and volumes by each section's bounding box. GBlocks will be allocated using the location of their gravity centers.

Scripted mode

Using the command's scripted mode *-ProjectWeightReportByHullSection* will enable two hidden options:

- **AxisLengthInMeters:** Enter the gravity center's preview axis length used in the result views
- **DrawSplittedGeometries:** When enabled, a layer *ProjectWeightReportByHullSection* will be added to the model, with the splitted geometry. This is useful to check if no curves/surfaces were lost in the sections' splitting operations.


HydrostaticReport

Computes a hydrostatic analysis at different heights and generates an excel report.

Walkthrough

The hull's surface or polysurface is selected as input. Once validated, Rhino's hydrostatic calculation is run at various heights as defined in options, and an excel report is generated.

	A	B	C	D	E	F	G	H	I	J	K	L
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												
17												



CASE : xxx
Hydrostatique-rev0
Customer:

Last update: 09/10/2018 (18:40)
Reference : HULL.3dm

Density: 1,025

TE (mm)	Hull Volume (m3)	Displacement (Kg)	LCB (m)	TCB (m)	VCB (m)	Wet Surface (m²)	Lwl (m)	Bwl (m)	Floating Surface (m²)	LCF (m)	TCF (m)
0	0	0	0	0	0	0	0	0	0	0	0
400	104,716	107333.9	6,6647E-09	4,4018E-15	0,211786	309,518	28,931	11,0001	300,97	2,6666E-09	-1,7745E-14
800	234,389	240248,725	-4,4117E-08	2,0758E-09	0,42879	368,815	32,3866	11,2	341,889	-1,6783E-08	2,6562E-09
1200	377,207	386637,175	-1,2697E-07	3,7393E-09	0,646117	422,516	35,3723	11,2	371,786	-4,1417E-08	5,4739E-09
1600	531,539	544827,475	-1,3983E-07	6,3871E-09	0,865704	476,361	38,3579	11,2	399,569	-2,5545E-08	9,1985E-09
2000	696,379	713788,475	-1,2904E-07	9,0957E-09	1,0873	527,381	40	11,2	421,618	3,5812E-10	1,2235E-08
2400	0	0	0	0	0	568,751	0	0	0	0	0

Hydro

Options

TEMin	Minimum height (mm)
TEmax	Maximum height (mm)
Delta	Distance between two tested height (mm)
Density	Water Density
AutoMinMax	Detect TEmIn and TEmax values from geometry (Only available when a geometry is selected)

Customization

The excel report template "Hydro_Model.xlsx" can be modified in the plugin's install directory, usually:

%AppData%\McNeel\Rhinoceros\7.0\Plug-ins\Marine Weight Schedule for RH6-RH7
(dac6da37-23fc-4ad6-9b46-33a2cad9e13b)\VersionNumber

(Adapt Rhino's version if needed, as well as the plugin's version) It is recommended to edit only the text values and the logos while keeping the document's general layout.

GBlock_SetData

Adds gravity center and mass information to a block. GBlocks are considered by the command

ProjectWeightReport , which makes them extremely useful for your pieces of equipment.




When using this command on an existing GBlock, its gravity center, mass information, and name will be overridden.

This is the only way to edit a GBlock name or data.

Walkthrough

1. Start the command
2. Pick a rhino block¹⁴⁾ in the model
3. Pick the GBlock's gravity center
4. Enter the GBlock's mass
5. Enter the GBlock's name (By default, Rhino's block name is used)
6. Click OK or press Enter

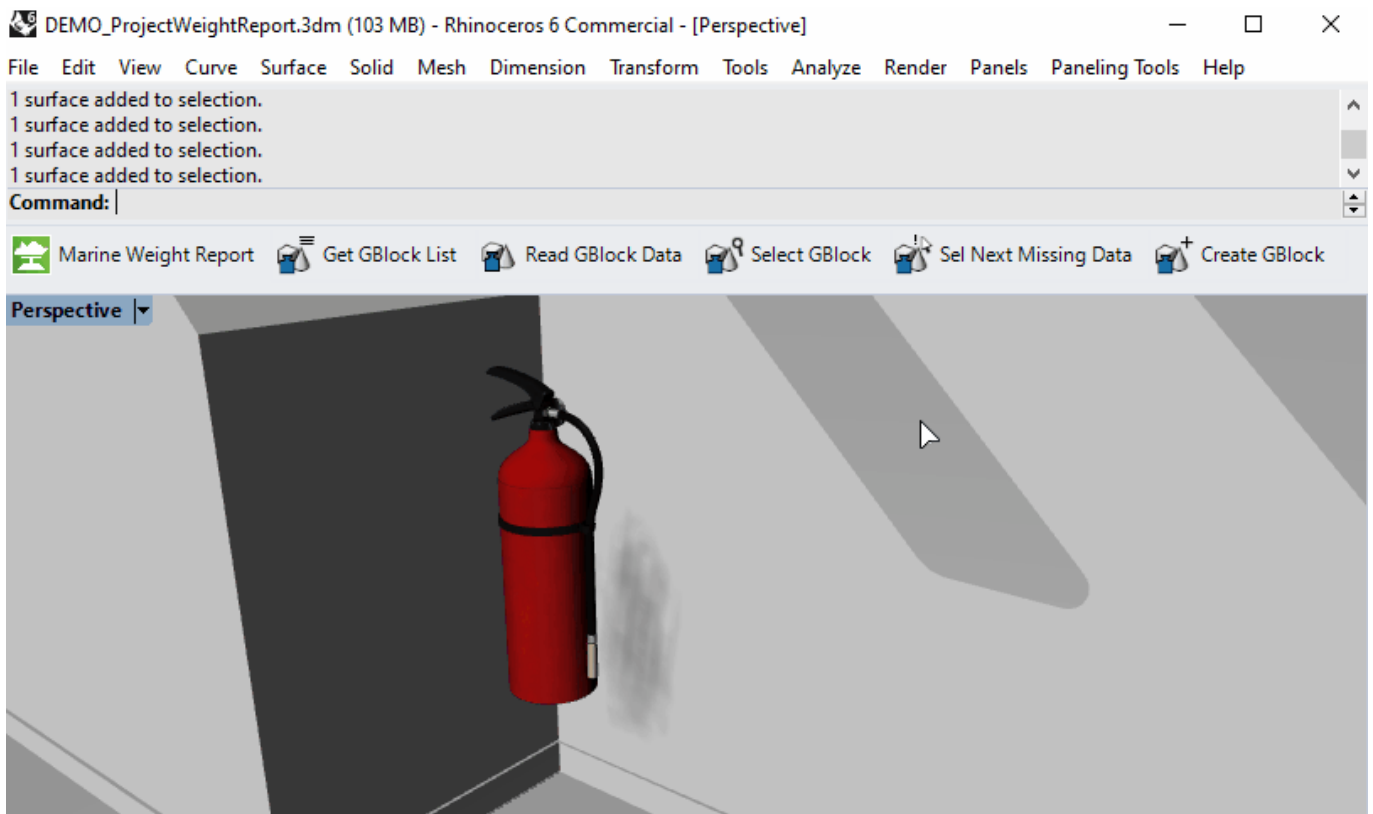


GBlock_GetList

Lists every existing GBlock name and masses to the command line.

Walkthrough

1. Start the command
2. A window is shown with details about every block instances in the model

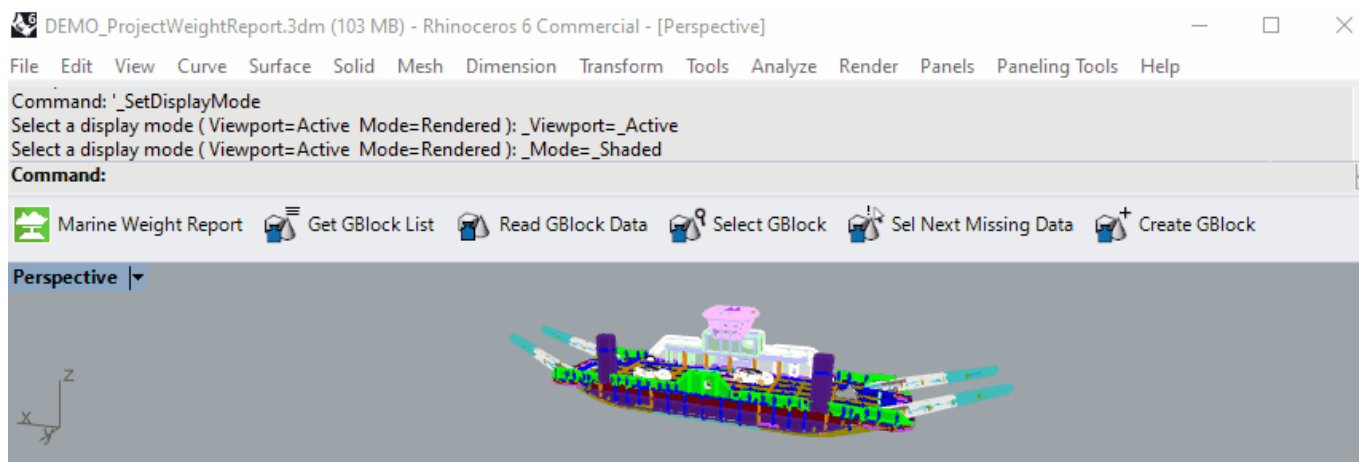

GBlock_ReadData

Reads a GBlock data.

Walkthrough

1. Select a GBlock
2. The data is shown in the command line:


```
Command: _GBlock_ReadData
Please select a block instance
extinguisher: 3,6 kg (-9960,813,-5131,802,3834,316)
Command: |
```

Gblock_Select

Select a block by their GBlock Name. (From a list of available GBlock names)

Walkthrough

1. Launch the command
2. Pick a GBlock name from the list
3. Every instance of this GBlock will be selected in the model

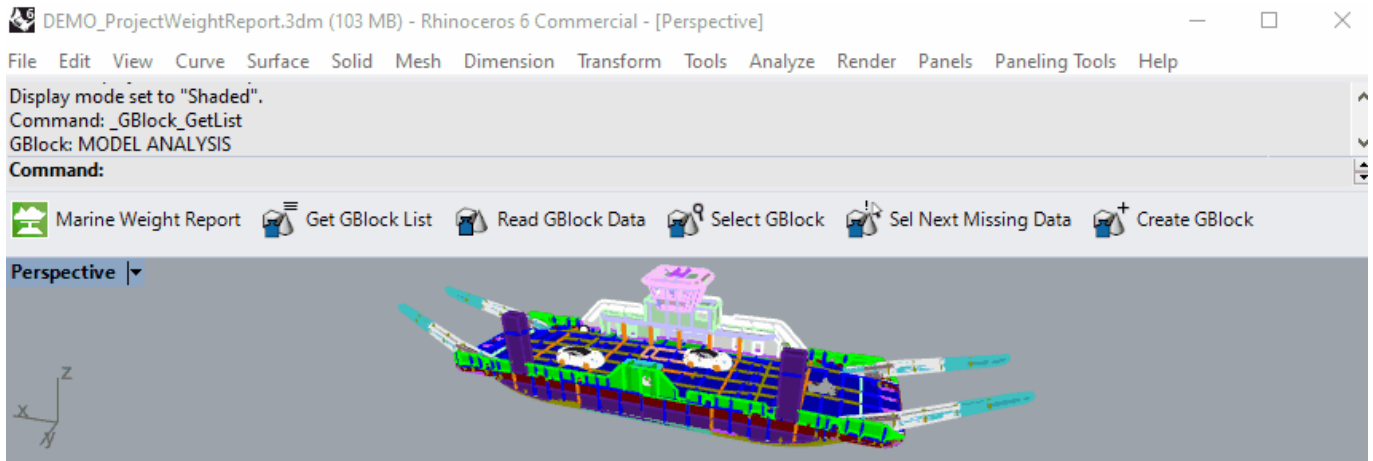


GBlock_SelectNextMissingData

Selects the next block in the document which is not a GBlock (gravity center and mass are undefined)

Walkthrough

1. Launch the command
2. The commands loops between the non-GBlocks instances in the model. (Press ESC to leave)

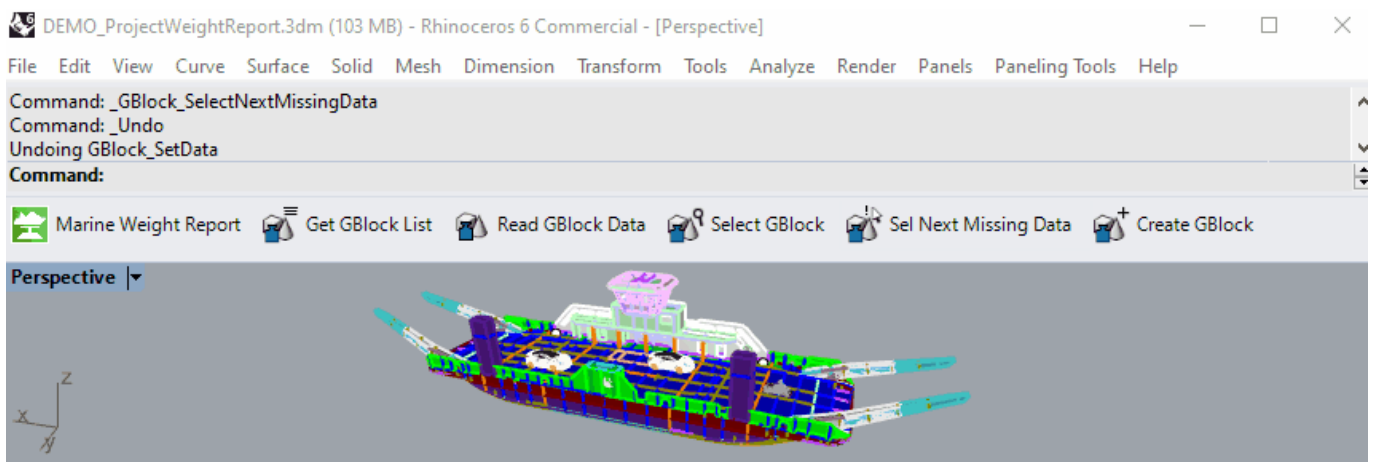

GBlock_Rename

Renames a GBlock definition (Every instance will be renamed)

Walkthrough

1. Launch the command
2. Pick a Gblock from the list
3. Enter a new name for the GBlock

1)

Rhino 6.15 or higher

2)

Rhino 7.5 or higher

3)

Rhino 6 or later only, with graphic user interface for Rhino7 only

4)

v1.0.4 and later versions

5)

The whole model or worksession will be used

6)

Read "Model preparation" below

7)

To avoid errors, opened polysurfaces won't be allowed

8)

Since v1.1.3

9)

instances references

10)

.xlsx

11)

If you installed from Rhino's package manager, the installation path is usually:

%appdata%\McNeel\Rhinoceros\7.0\Plug-ins

12)

From v1.2.0

13)

The coordinates can be registered either by clicking on the model or by entering numbers in the command line.

14)

Instance reference

From:

<https://wiki.tomkod.com/> - TomKod knowledge base

Permanent link:

<https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1639490341>

Last update: 2021/12/14 14:59

