

Marine Weight Schedule - User Manual

Introduction

Marine Weight Schedule is a plugin for Rhino 3D designed to generate - from a vessel's 3D model - a bill of masses/inertias, as well as a Bill Of Materials. It take in account points, curves, surfaces, solids and blocks, and use the parameters from the layers names to apply the unitary/lineic/surfacic/volumic masses, with a margin percentage applied.

A command is also provided to generate an hydrostatic report at a given height interval (based on Rhino hydrostatics features)

Both reports will be generated as excel files (.xlsx) based on a customizable template, but microsoft excel doesn't need to be installed on the computer.

Plugin installation

Overview

The plugin installer can be downloaded at: <https://www.tomkod.com/product/marine-weight-schedule/>
A free trial is included, and yearly licenses can be purchased on the aforementioned page.
Marine Weight Schedule works for Rhino 6¹⁾ and Rhino7²⁾.

Yak

Our plugins are also compatible with Yak, Rhino's new package manager ³⁾, which is basically an application store for Rhino. You just need to call Rhino's command **`_PackageManager`**:



You can also install from the repository with the following command line:

```
"D:\Program Files\Rhino 6\System\Yak.exe" install 'PluginName'
```

If you add this in a batch file (*.bat) at windows startup, it is probably the best way to keep all your plugins up-to-date 😊



```
C:\WINDOWS\system32\cmd.exe

C:\>"C:\Program Files\Rhino 6\System\Yak.exe" install PluginName
Downloading PluginName (X.X.X)...
Downloaded PluginName (X.X.X)
Installing PluginName (X.X.X)...
Successfully installed PluginName (X.X.X)

C:\>
```

License activation

Prerequisites

The free evaluation can be used once per computer, and requires network access to www.license.tomkod.com

The license activation requires network access to www.tomkod.com

Please check your firewall in case of failure.

Activation form


The activation window automatically shows up when the plugin is loading and a valid license or trial is not registered. If you want to see, change or remove your license while the plugin is already loaded, you can use the Rhino commands **PluginName_License**.

Activation status is always visible on the upper right corner of the form, if the icon is green your plugin will be enabled:



Trial Tab


This first tab is dedicated to the trial requests. Your trial status is displayed, and the button is disabled if a trial is not available for your computer (Your trial has already been activated, or the server is unreachable)

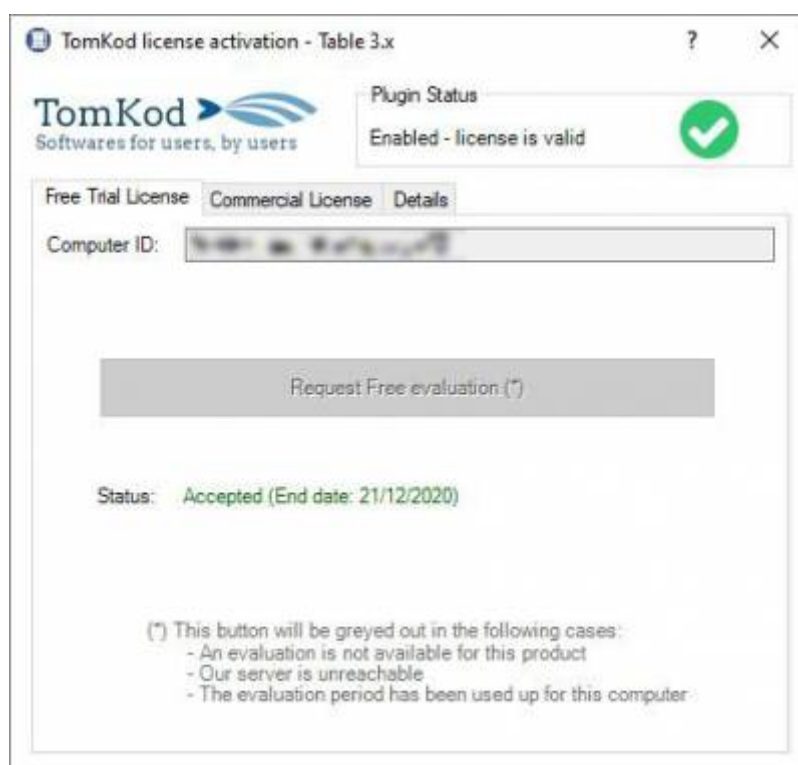

Commercial Tab

This tab's two main buttons let you Check-out (Activate) or Check-in (Desactivate) your license from

our license server.

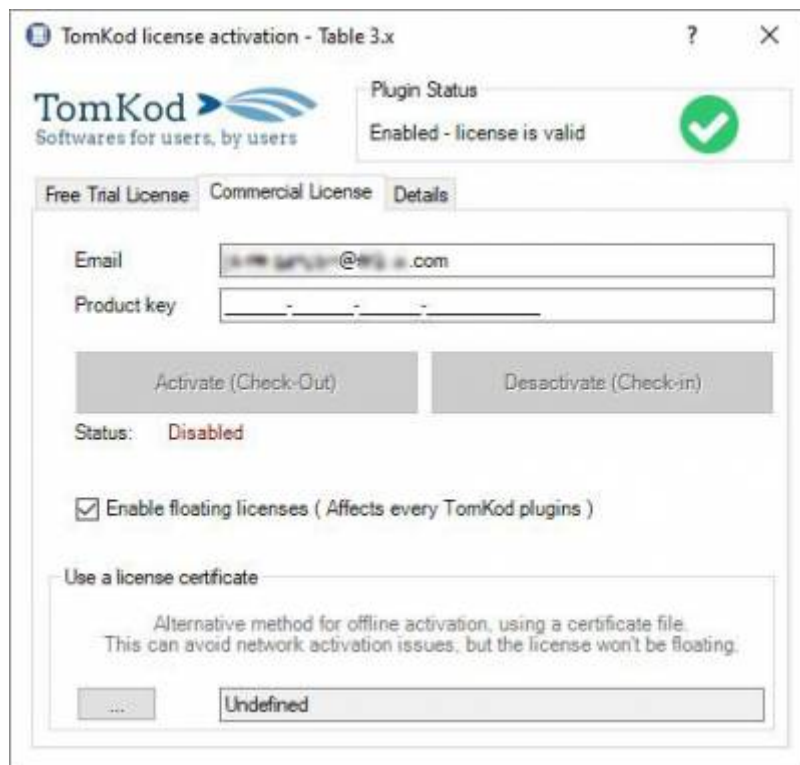


When the checkbox *“Enable floating licenses”* is checked, every TomKod's plugin will try to deactivate the license automatically when closing (Making it available for another of your computers)

Finally, a license certificate (*.TkLic) can be selected at the bottom of this tab. It allows to activate a license offline, but the license won't be floating anymore. If you need one, contact us at <https://www.tomkod.com/contact/>

Toolbar

The toolbars for Rhino are always included in your plugins installation directory, or can be downloaded [here](#).


You just have to drag/drop the file “Tomkod.rui” to a rhino window to install them.

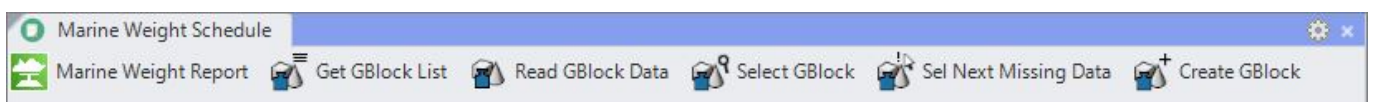

Features and commands

MWS_About

This command can be used only from the command line prompt. It displays the plugin's current revision and license status.

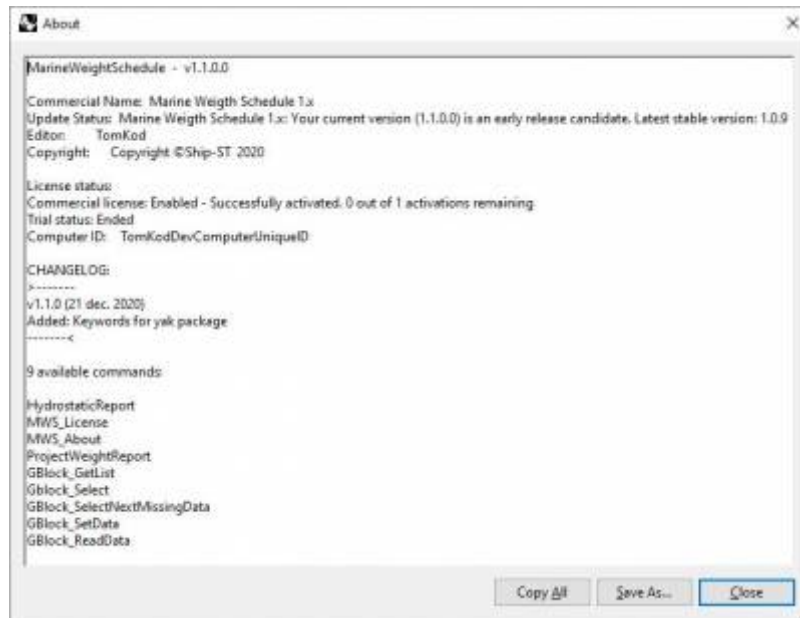

MWS_License

This command can be used only from the command line prompt. It displays the plugin's activation form.

See [license_activation](#).

ProjectWeightReport

Computes the whole model masses, as well as a Bill Of Materials⁴⁾ and generates an excel report.

Walkthrough

For each layer⁵⁾, the command will retrieve the *Mass*, *Margin* and *Vertical offset* values from the layer name⁶⁾, then:

1. For each rhino object, the actual mass and gravity center will be computed, using the layer values. The layer's *Mass* will be used differently, depending on the object's type: ponctual mass for Points, lineic mass for curves, surfacic mass for surfaces⁷⁾, and volumic mass for closed polysurfaces.
2. At the same time, the Bill-of-Materials will be created internally.
3. An excel report will be created.



Model preparation

The fundamental idea of this plugin is to match data from the model's objects and their layer. For this reason, each layer should contain only one specific material. *For example:*

- The layer **Deck1:SectionB:Nuts** could contain only points, and the layer's (*mass*) information would be used as a ponctual mass for each nut.
- The layer **Deck1:SectionB:plates** could contain only surfaces, and the layer's (*mass*) information would be used as a surfacic mass for each plate.


Layers naming convention

The document's layers should follow the following naming convention:

LayerName (Mass) %Margin% |VerticalOffset|

where:

- **Mass** will be the ponctual/lineic/surfacic/volumic mass
- **Margin** (optional) will be the percentage to add to the object's mass.
- **VerticalOffset** (optional) will be the the vertical offset to apply to the layer's masses

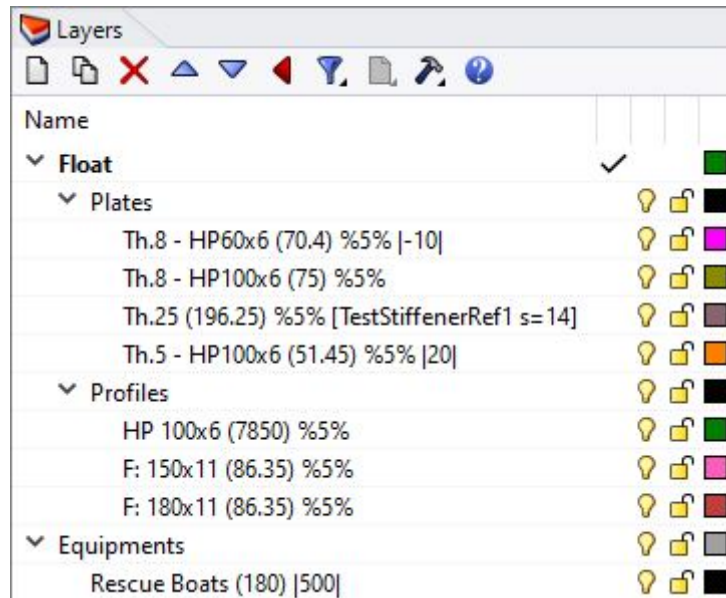

Particular case for Stiffeners

A specific naming convention has been added to properly count the stiffeners in the Bill-of-Materials, to consider the scenarii explained below.



Those particular cases only impact how materials will be counted in the Bill-of-Material tab. The weight report results won't be impacted.

• Implicit stiffeners

There are some cases where you don't want/need to create an actual geometry for your structure stiffeners, for example when you are at the early stage of your project. *Implicit stiffeners* let you count the required stiffener lengths relative to the layer's metal sheet's areas.

```
LAYERNAME: MyLayerName (Mass) %Margin% |VerticalOffset| [StiffenerName s=value]
```

In the Bill-of-Material, this would create two outputs: an area for the surfaces in "MyLayerName", and a length for their stiffeners.



'StiffenerName Length' = 'MyLayerName Area' / s

For example:

```
Th.6 (56.9) %5% [HP80x6 s=49.05] [StiffenerName s=49.05]
```

• Stiffeners defined as curves in the model

Two kind of curves-defined stiffeners can be used:

- Folded plates

LAYERNAME: W:120x6 BF60

This will be counted as one surface, Thickness 6, width=120+60. Thus the result in the Bill-of-materials will be:



'Th.6 plate Area' = length x (120+60)

- Profile with flat plate

W:120x6 F:80x8

This will count as one surface, Thickness 6, width=120, plus one profile 80x8



In this case, the command will output an area for the plate, and a length for the profile:

'Th.6 plate Area' = length x 120

'80x8 profile length ' =length

• Stiffeners defined as surfaces in the model

In some cases, you might want to represent your stiffeners as a 3D surface in the model, but count them as lineic outputs in the Bill-of-Materials because they are technically profiles.

LAYERNAME: F:80x8

This would output:



'80x8 profile Length' = area / 80

As for the weight estimate, the layer's optional %Tolerance% will be considered:

LAYERNAME: F:80x8 |34.1| (87.2) %3.4%

This would output:


$$\text{'80x8 profile Length'} = (\text{area} / 80) + (\text{area} / 80) * 3.4/100$$

Particular case for Blocks

By default, rhino® blocks⁸⁾ are ignored by the command. However we provide several commands to transform blocks into GBlocks, which are considered in the reports as ponctual masses.

See [gblock setdata](#)




When the command will process GBlocks, their layer properties will be ignored, and the Gblock's internal definition will be used instead (Name, gravity center, mass).

Output

When the whole model has been processed, an excel⁹⁾ report is generated, and the user is invited to pick a name and location for the resulting file. Bill of masses main sheet:

H31



TomKod

Softwares for users, by users

PROJECT : 2020

MASS SUMMARY-re0

Customer :

Last update: 05/01/2021 (15:13)

Reference: DEMO_ProjectWeightReport.3dm

Item	Mass (kg)	Xg (mm)	Yg (mm)	Zg (mm)	Masses Inertias		
					Ixx (kg.mm²)	Iyy (kg.mm²)	Izz (kg.mm²)
Volumic Masses	256	-62	-821	1739	4756536917	60400264,6	7,878E+10
Surface Masses	69623	-19	150	2211	2322883807	3,0123E+13	2,5896E+10
Lineic Masses	0	0	0	0	0	0	0
Ponctual Masses	2611	2125	-93	3408	18519817,8	15665966933	2,1863E+11
Total	72489	58	138	2252	1,116E+10	3,014E+13	3,3532E+11

New point's coordinates :

X= 0

Y= 0

Z= 0



Huggens Theorem

New inertia

Ixx= 380 262 010 791

Iyy= 30 508 174 810 857

Izz= 336 945 050 374

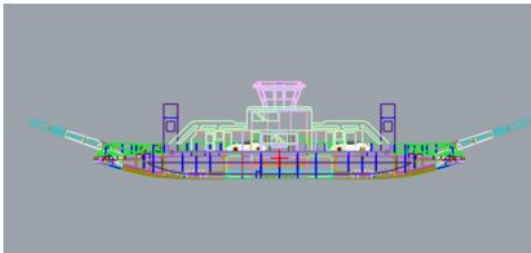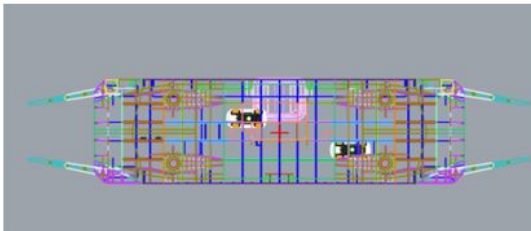Results

Volumes

Surfaces

Curves

Points

BillOfMaterials

Bill of masses detailed sheets for Volumes, surfaces, curves and points:

Last update: 2021/01/07 12:09 start:plugins:marineweightschedule:mws-usermanual <https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1610017751>

A2

✕ ✓ f_x

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
1	<div style="margin-left: 10px;"> TomKod Softwares for users, by users </div>	PROJECT : xxx														
2		MASS SUMMARY-re0														
3		Customer :														
4		Last update : 10/02/2021 (13.49)														
5	Reference : DEMO_ProjectWeightReport_v2.3dm															
6	BILL OF VOLUMIC MASSES															
7									Volumes inertia				Masses inertia			
8	Item	Volume (mm³)	Volumic mass (kg/m³)	Margins	Mass (kg)	Xg (mm)	Yg (mm)	Zg (mm)	Ixx (mm⁴)	Iyy (mm⁴)	Izz (mm⁴)	Ixx (kg.mm⁴)	Iyy (kg.mm⁴)	Izz (kg.mm⁴)		
9	Bi-Metal	4.13E+07	53	0.0%	2	-214	-5261	2358	8.23E+12	1.96E+15	1.97E+15	4.36E+05	1.04E+08	1.04E+08		
10	Steel-Profiles:Round Ø20	2636208	7850	5.0%	22	-165	4874	4150	1.25E+12	1.93E+12	1.75E+12	1.03E+07	1.59E+07	1.44E+07		
11	Float-Profiles:HP 120x6	1.45E+07	7850	5.0%	120	0	0	1691	1.81E+14	2.65E+15	2.83E+15	1.49E+09	2.19E+10	2.33E+10		
12	Float-Profiles:HP 100x6	1.15E+07	7850	5.0%	95	-296	-469	1758	6.96E+13	8.70E+14	9.34E+14	5.74E+08	7.17E+09	7.70E+09		
13	Float-Profiles:HP 200x10	2.51E+07	7850	5.0%	207	2	-807	1407	7.60E+13	3.00E+15	3.06E+15	6.27E+08	2.48E+10	2.52E+10		
14	Float-Profiles:Round Ø30	7526822	7850	5.0%	62	0	-4874	2005	2.54E+12	2.49E+15	2.49E+15	2.09E+07	2.05E+10	2.05E+10		
15					507.8957	-62.3991	-820.693	1739.091				4.76E+09	7.46E+10	7.88E+10		
16																
17																
18																

Results
Volumes
Surfaces
Curves
Points
BillOfMaterials
+

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

TomKod

Softwares for users, by users

PROJECT : .wmw

MASS SUMMARY-re0

Customer :

Last update: 05/07/2021 [15-13]

Reference: DEMO_ProjectWeightReport.3dm

BILL OF PONCTUAL MASSES

Item	Points quantity	Ponctual mass (kg)	Margins	Mass (kg)	Xg (mm)	Yg (mm)	Zg (mm)	Points inertia			Masses inertia		
								Ixx (mm ⁴)	Iyy (mm ⁴)	Izz (mm ⁴)	Ixx (kg.mm ⁴)	Iyy (kg.mm ⁴)	Izz (kg.mm ⁴)
Equipments # Tesla model R	2	2300	0.0%	4600	2291	294	3416	5810375	63113833	68924208	13363961587	145161616500	158525678088
Equipments # MissingData - Bike Harley	1	0	0.0%	0	0	0	0	0	0	0	0	0	0
Equipments:Rescue Boats	2	180	0.0%	360	0	-5041	3308	0	2,72E+08	2,72E+08	0,00E+00	4,89E+10	4,89E+10
				4960	2124,514	-93,28	3408,451				2,29E+10	1,96E+11	2,1869E+11

<

>

Results

Volumes

Surfaces


Curves

Points


BillOfMaterials

(+)

Bill of materials:

	A	B	C	D	E	F	G	H
1	 TomKod Softwares for users, by users	PROJECT : xxx						
2		MASS SUMMARY-re0						
3		Customer :						
4								
5	Last update: 18/02/2021 (13:49)							
6	Reference: DEMO_Project\WeightReport_v2.3dm							
7								
8	BILL OF MATERIALS							
9								
10	LAMINATED PLATES							
11								
12	F: 100x11	22994979.1	mm³					
13	F: 100x8	3538524.77	mm³					
14	F: 120x11	5090566.62	mm³					
15	F: 150x11	5511497.29	mm³					
38	Th.6	103378740	mm³					
40	Th.8	255121521	mm³					
44								
45	EXTRUDED PROFILES							
46								
47	100x10	16045.2844	mm					
48	60x6	9000.91597	mm					
49	80x10	53421.4513	mm					
50	80x6	26671.4546	mm					
54								
55	OTHERS							
56								
57	Equipments # Bike Harley		1					
58	Equipments # Tesla model R		1					
59	Rescue Boats		2					

A custom ViewPort is created with the gravity center displayed:

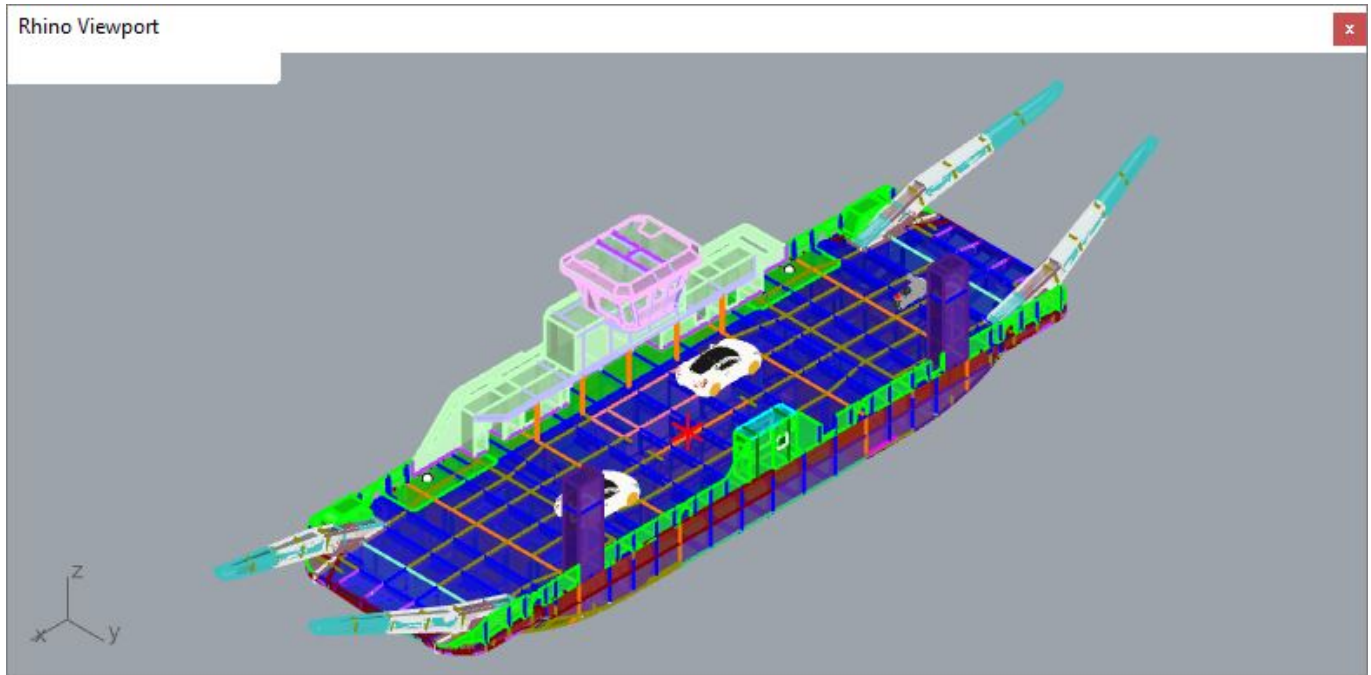

Options

No option available.

Customization

The excel report template "PWE_Model.xlsx" can be modified in the plugin's install directory, usually:

`%AppData%\McNeel\Rhinoceros\7.0\Plug-ins\Marine Weight Schedule for RH6-RH7
(dac6da37-23fc-4ad6-9b46-33a2cad9e13b)\VersionNumber`

(Adapt Rhino's version if needed, as well as the plugin's version)

It is recommended to edit only the texts values and the logos, while keeping the document general layout.

HydrostaticReport

Computes an hydrostatic analysis at different heights and generates an excel report.

Walkthrough

The hull's surface or polysurface is selected as input. Once validated, Rhino's hydrostatic culcation is runned at various heights as defined in options, and an excel report is generated.

	A	B	C	D	E	F	G	H	I	J	K	L
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												
17												

Options

TEMin	Minimum height (mm)
TEmax	Maximum height (mm)
Delta	Distance between two tested height (mm)
Density	Water Density
AutoMinMax	Detect TEmin and TEmax values from geometry (Only available when a geometry is selected)

Customization

The excel report template "Hydro_Model.xlsx" can be modified in the plugin's install directory, usually:

%AppData%\McNeel\Rhinoceros\7.0\Plug-ins\Marine Weight Schedule for RH6-RH7
(dac6da37-23fc-4ad6-9b46-33a2cad9e13b)\VersionNumber
(Adapt Rhino's version if needed, as well as the plugin's version)

It is recommended to edit only the texts values and the logos, while keeping the document general layout.


GBlock_SetData

Add gravity center and mass informations to a block. GBlocks are considered by the command *ProjectWeightReport* , which makes them extremely useful for your equipments.

Walkthrough

1. Start the command
2. Pick a rhino block¹⁰⁾ in the model
3. Pick the GBlock's gravity center

4. Enter the GBlock's mass
5. Enter the GBlock's name (By default, Rhino's block name is used)
6. Click OK or press Enter

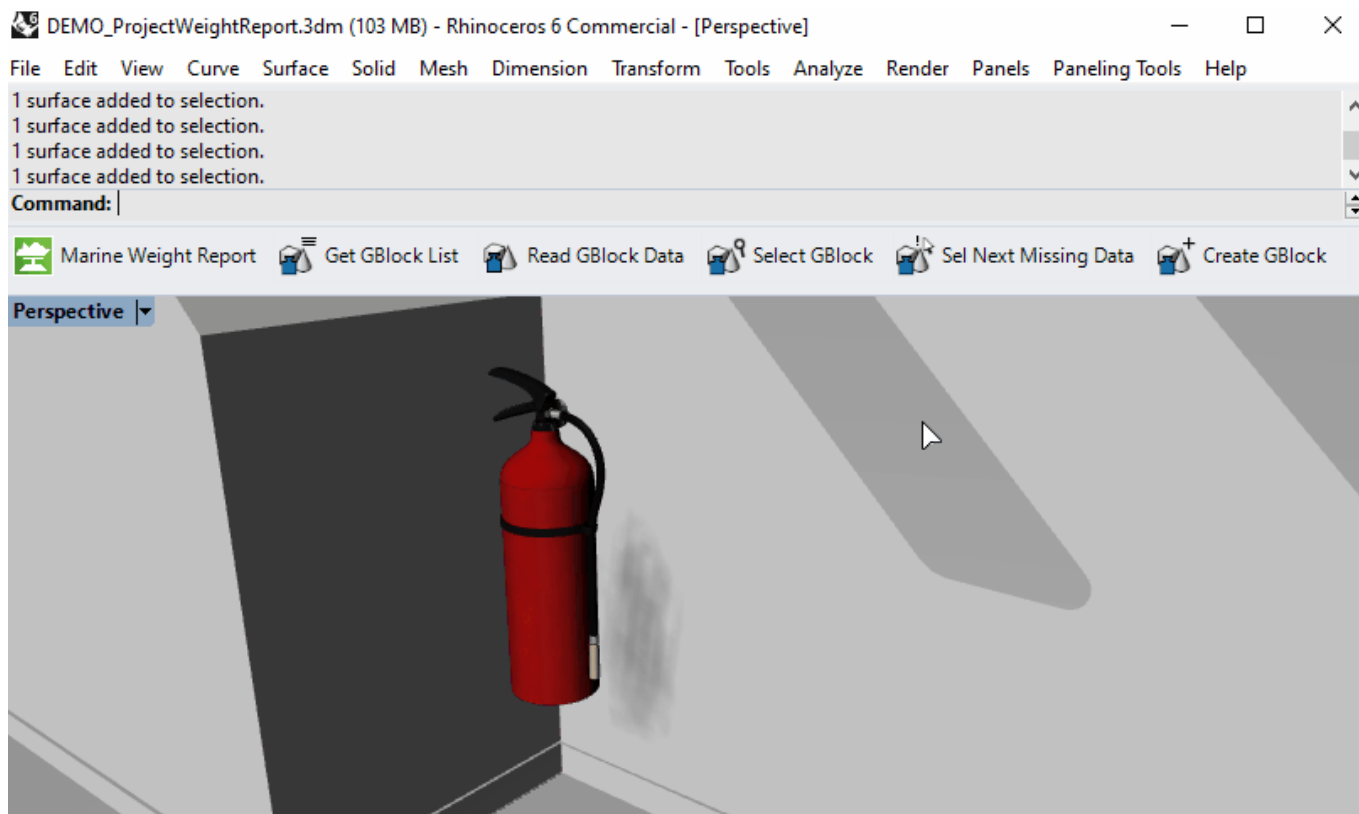


GBlock_GetList

Lists every existing GBlock names and masses to the command line.

Walkthrough

1. Start the command
2. A windows is shown with details about every blocks instances in the model

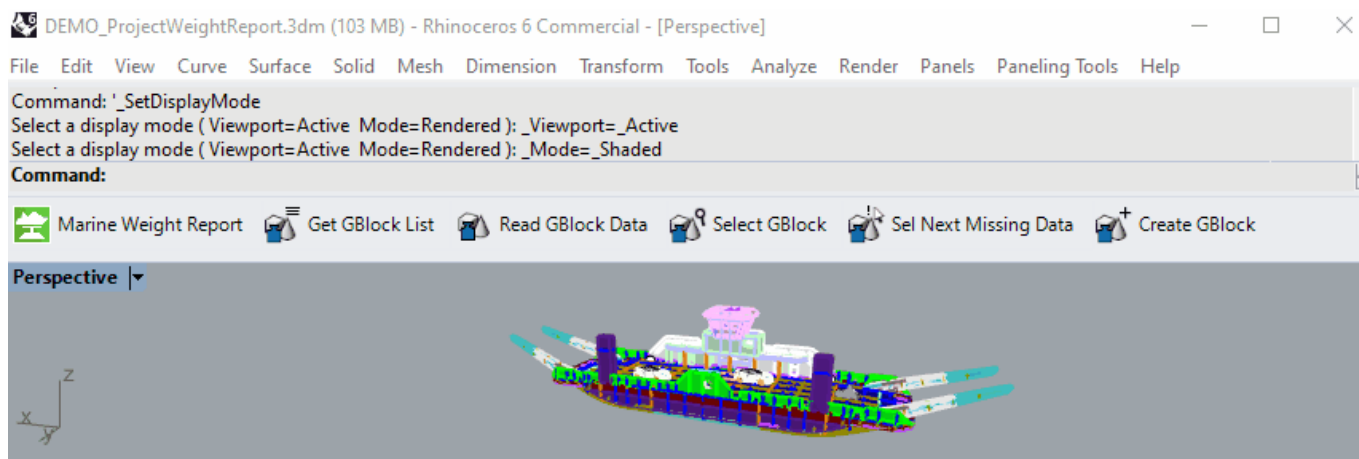

GBlock_ReadData

Reads a GBlock data.

Walkthrough

1. Select a GBlock
2. The data is shown in the command line:

```
Command: _GBlock_ReadData
Please select a block instance
extinguisher: 3,6 kg (-9960,813, -5131,802,3834,316)
Command: |
```

Gblock_Select

Select a block by their GBlock Name. (From a list of available GBlock names)

Walkthrough



Todo

GBlock_SelectNextMissingData

Select the next block in the document where gravity center and mass are undefined

Walkthrough



Todo

¹⁾

Rhino6.15 or later

²⁾

Tested up to Rhino 7.1

³⁾

Rhino 6 or later only, with graphic user interface for Rhino7 only

⁴⁾

v1.0.4 and later versions

⁵⁾

The whole model or worksession will be used

6)

Read "Model preparation" below

7)

To avoid errors, opened polysurfaces won't be allowed

8)

instances references

9)

.xlsx

10)

Instance reference

From:

<https://wiki.tomkod.com/> - TomKod knowledge base

Permanent link:

<https://wiki.tomkod.com/doku.php?id=start:plugins:marineweightschedule:mws-usermanual&rev=1610017751>

Last update: **2021/01/07 12:09**

